

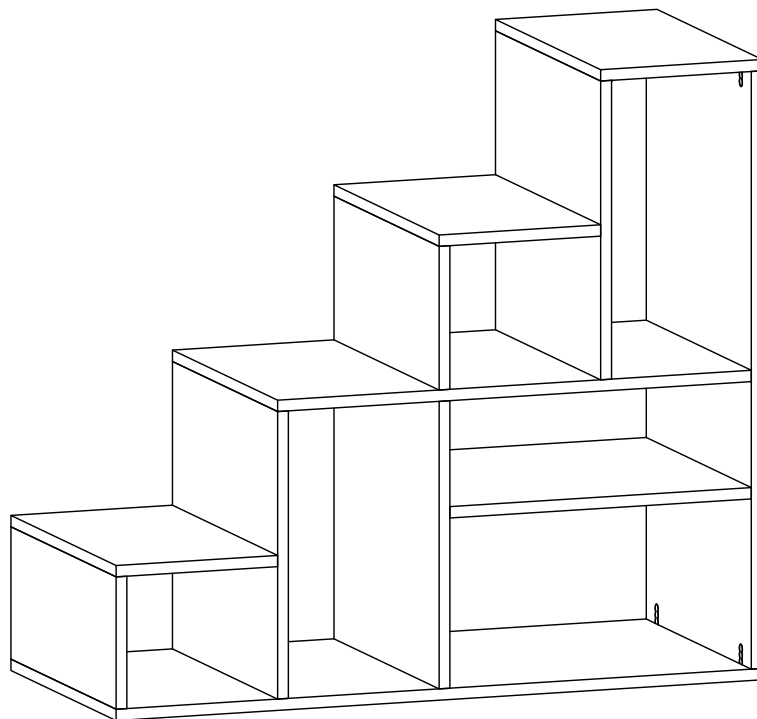


Assembly Instructions


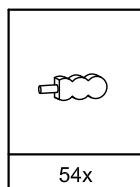


PARTS

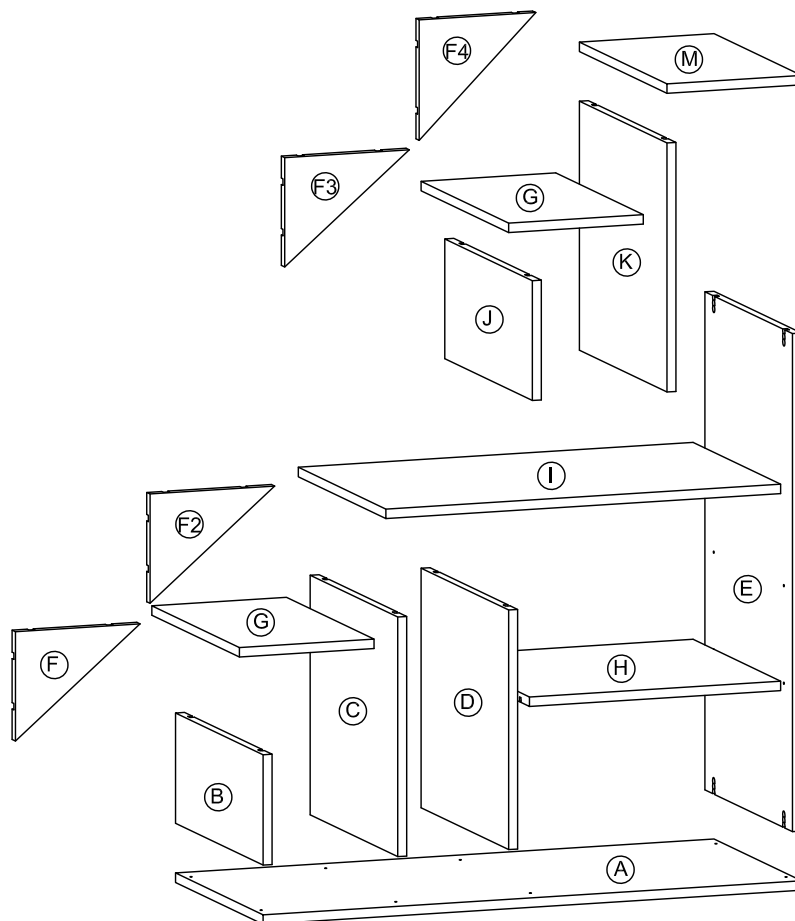

*** Use a drill with a M6 bit to fasten to cabinets. (M6 bit included)

STEP 01

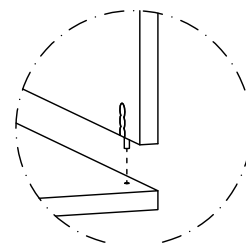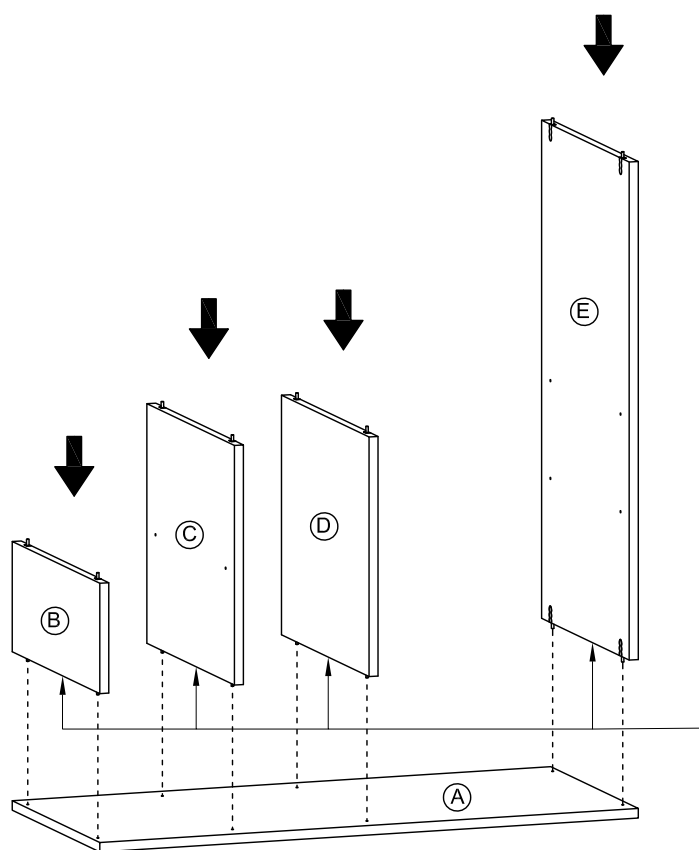


The cabienos must be align with a receiving hole




Apply wood glue to the edges of the wood that will make contact with each other.


STEP 02

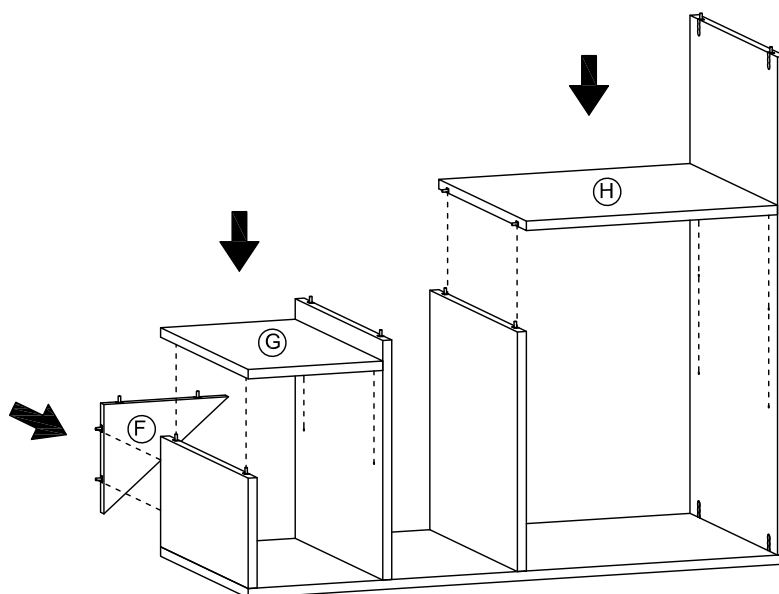


STEP 03

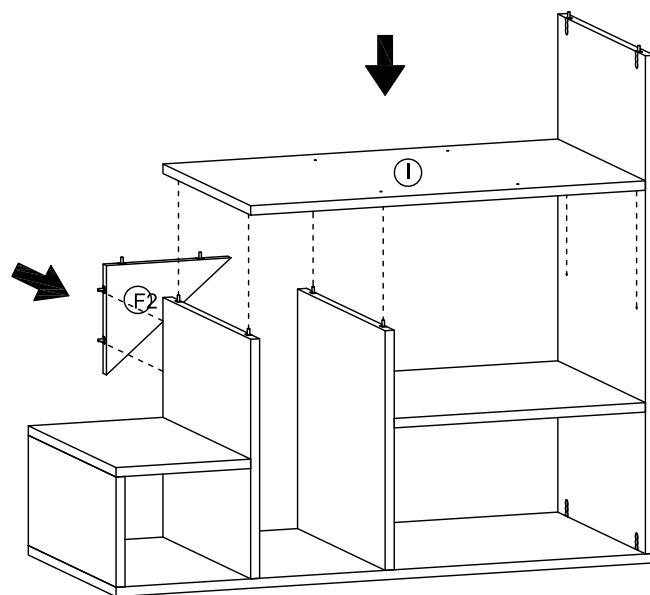


STEP 04

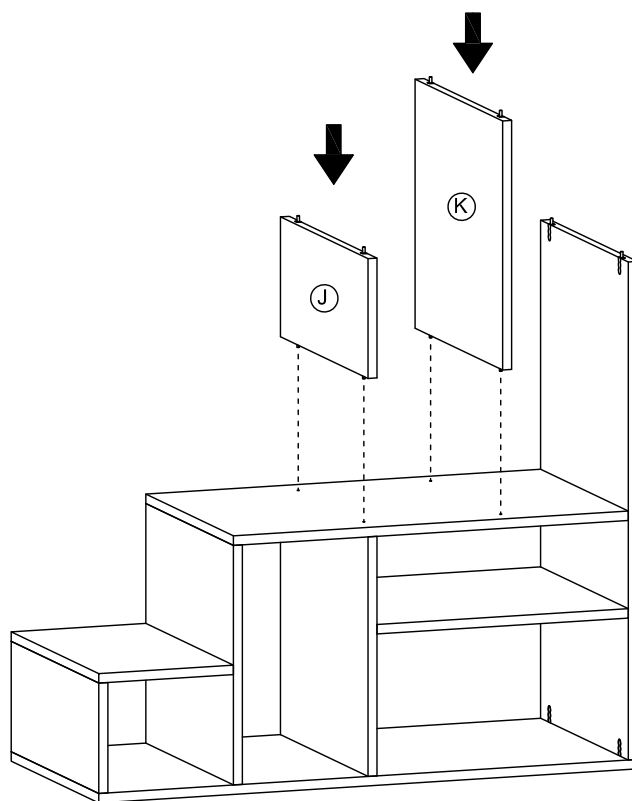

STEP 05

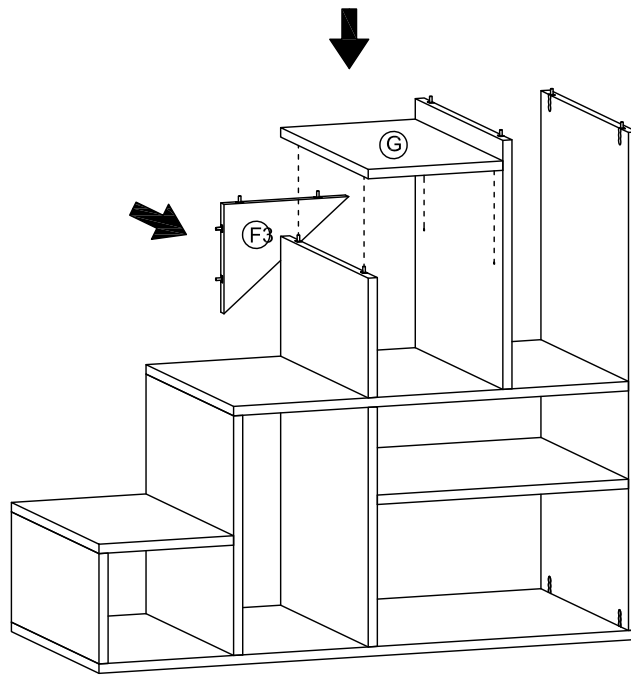

STEP 06

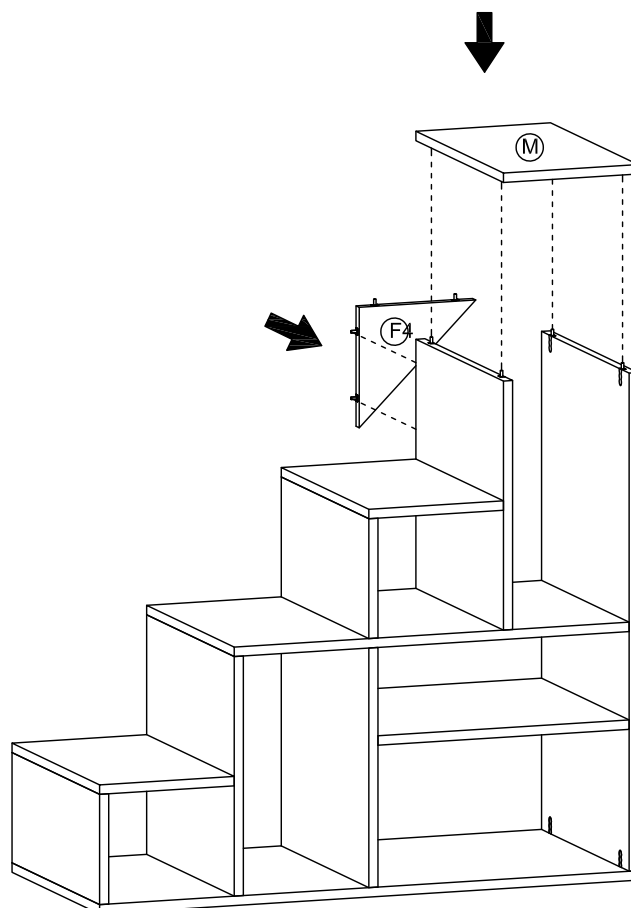

FINISH


Installation Note:


For the safest and most secure setup, we recommend professional installation.

Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.





Use the diagram for cabinet placement.

1. Match the number/letter indicated in the hinge pocket on back of cabinet to diagram.
2. Orient cabinet doors so hinge pockets match the red X's.
3. Screw Hinges into cabinets, then secure to staircase.

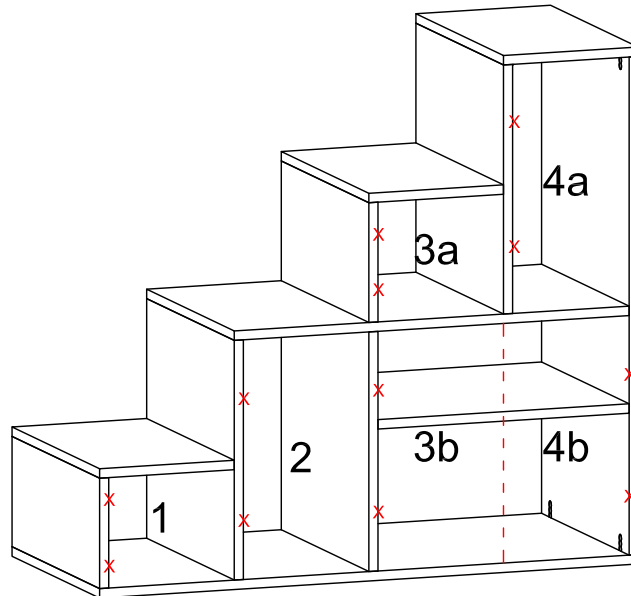


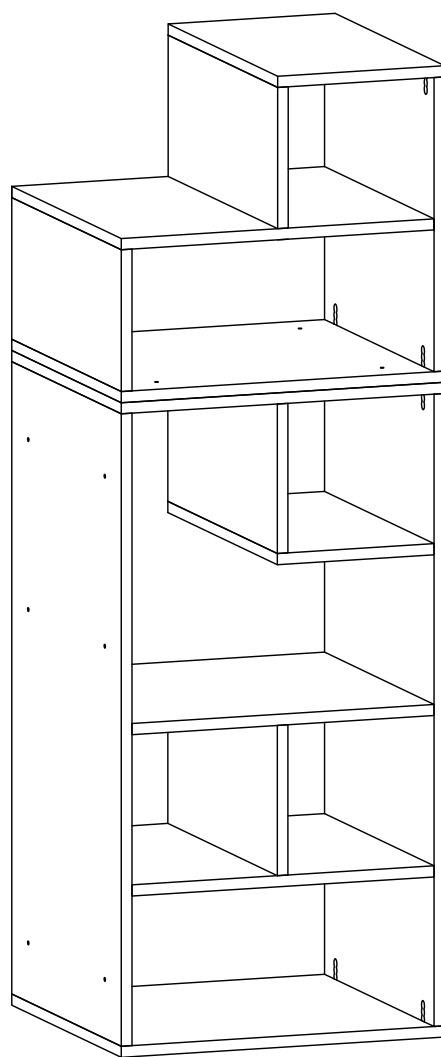


PARTS

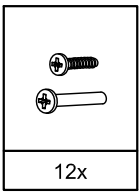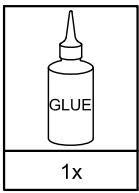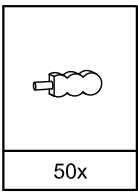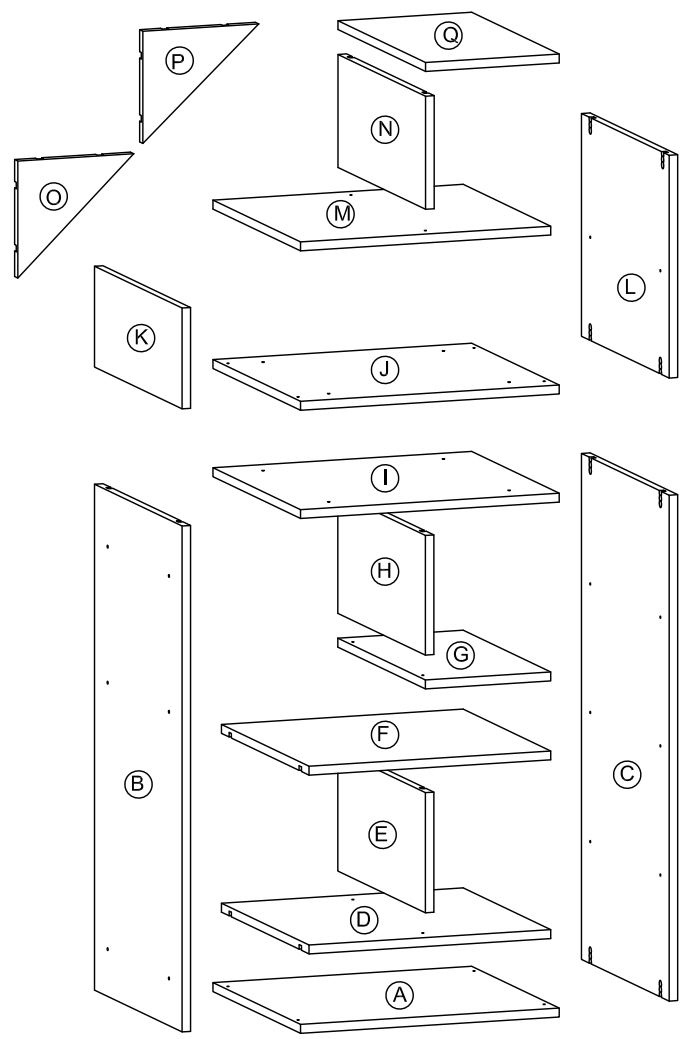


STEP 01

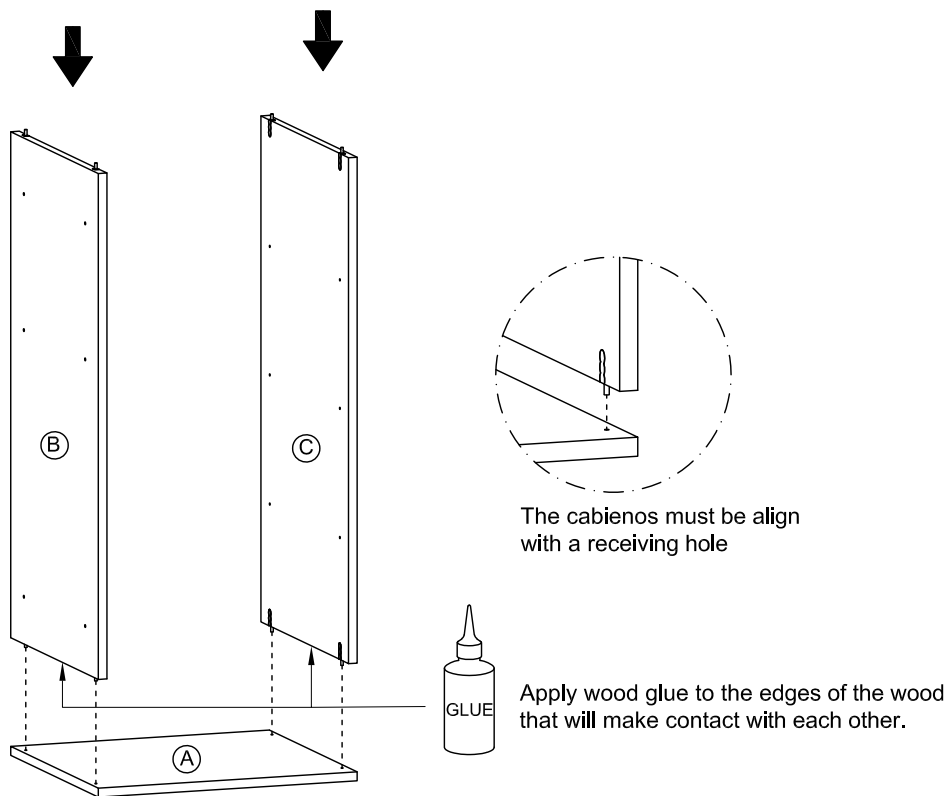


STEP 02

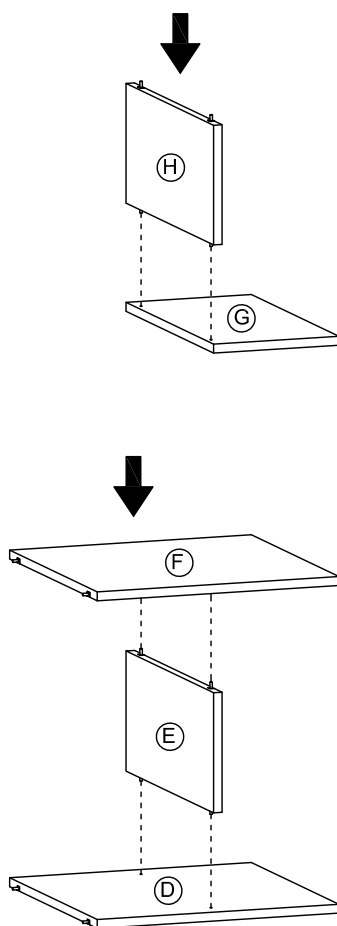


STEP 03

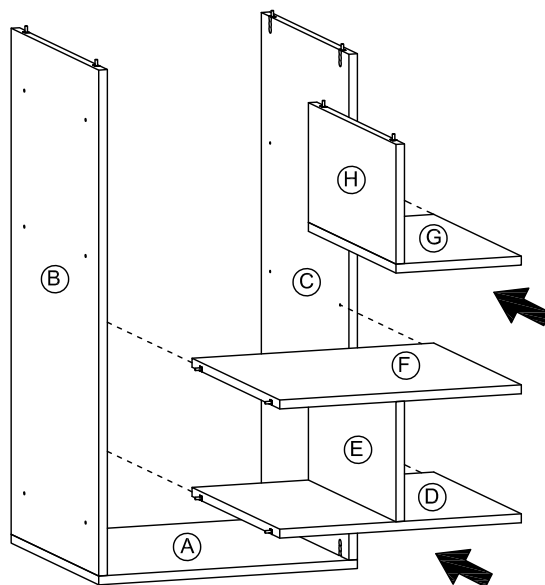


STEP 04

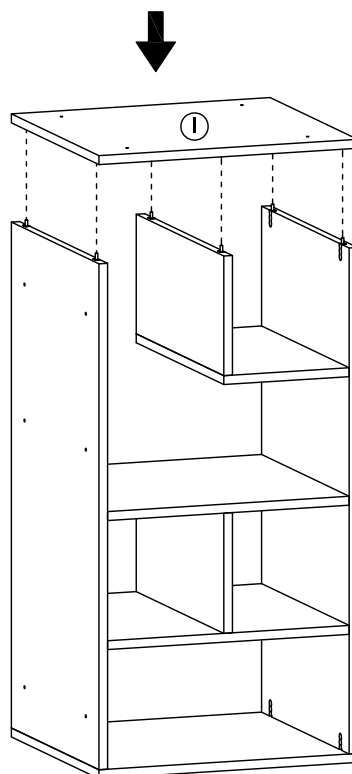


STEP 05

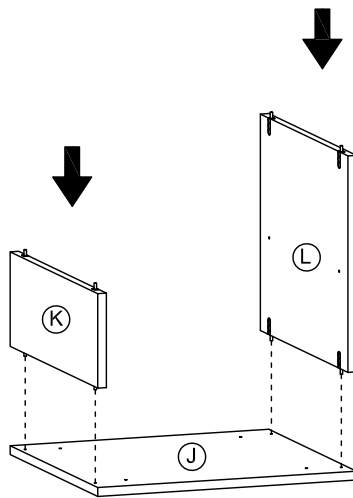


STEP 06

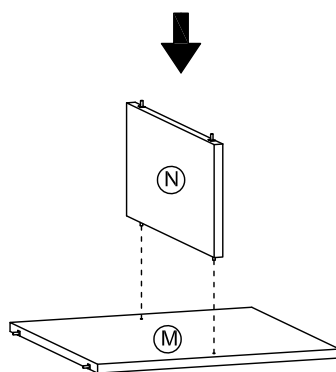


STEP 07

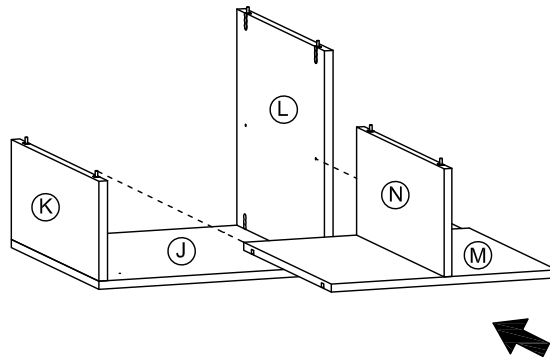


STEP 08

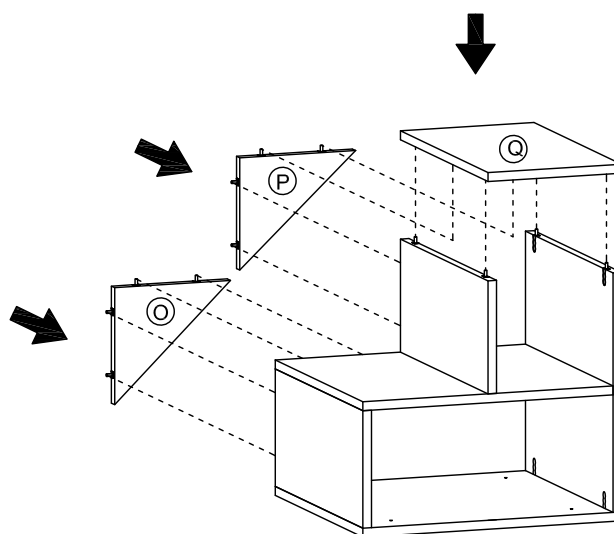

STEP 09


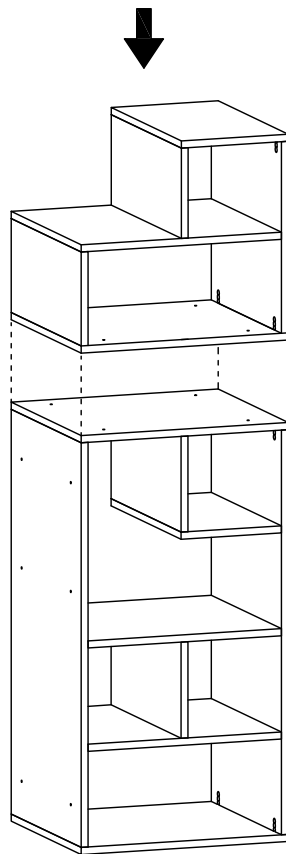


STEP 10

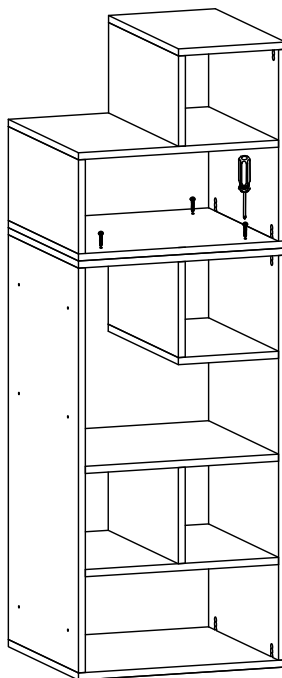

The final step would be to bolt the two components together.

STEP 11

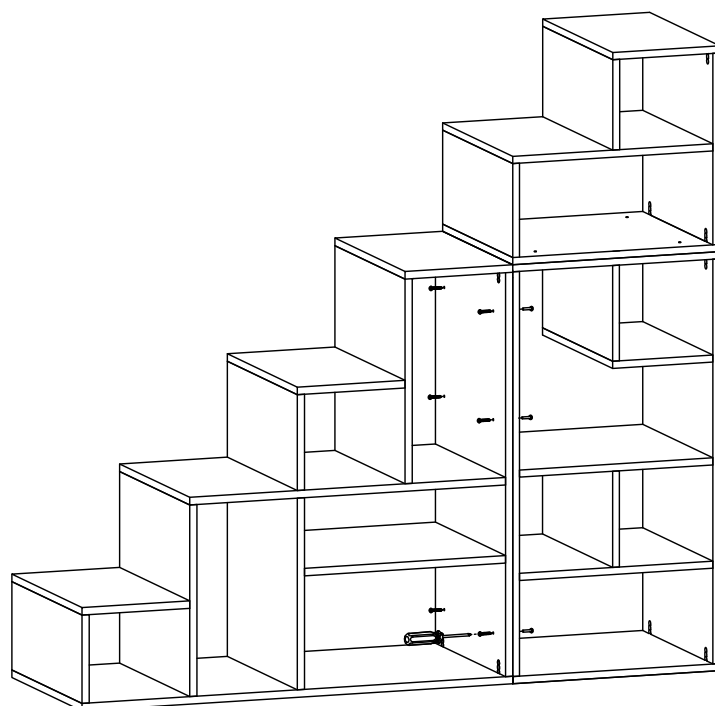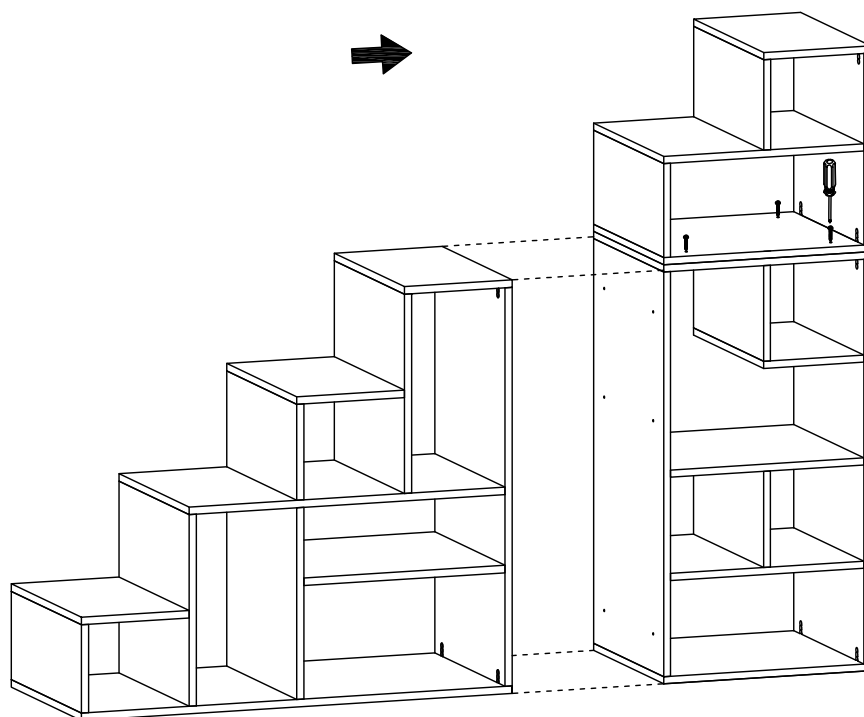

FINISH

Installation Note:

For the safest and most secure setup, we recommend professional installation.

Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.

Use the diagram for cabinet placement.

1. Match the number/letter indicated in the hinge pocket on back to diagram.
2. Orient cabinet doors so hinge pockets match the red X's.
3. Screw hinges into cabinets, then secure to staircase.

