

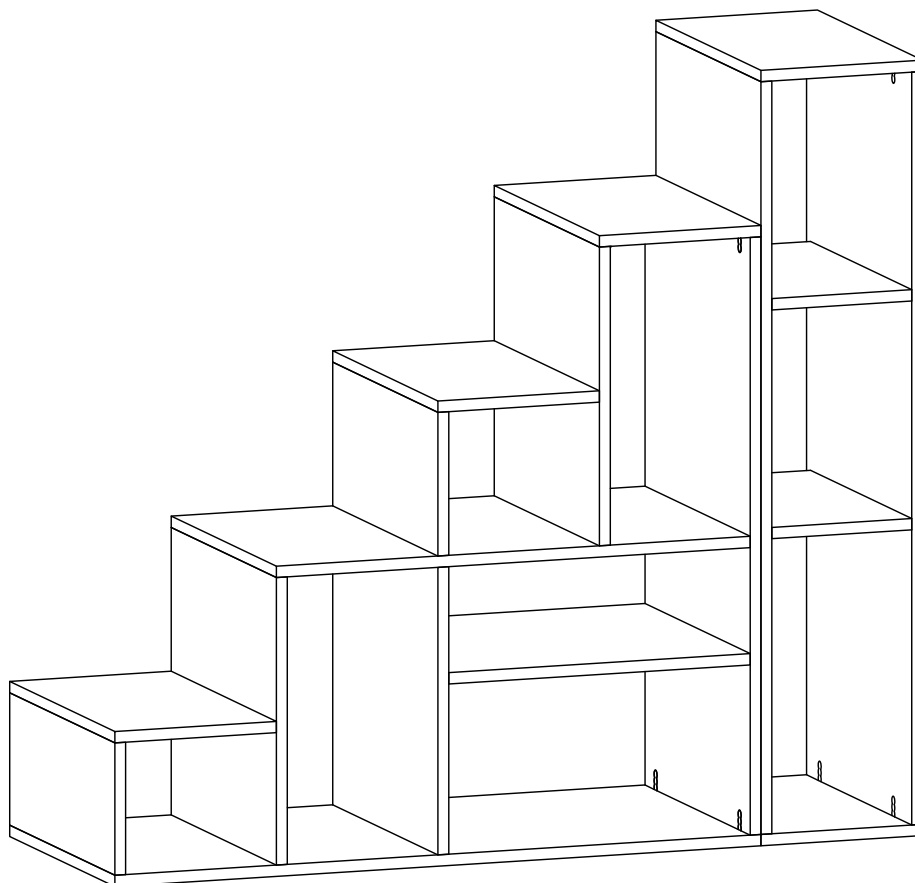
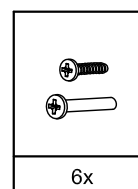
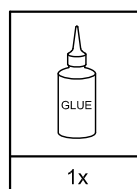


Assembly Instructions

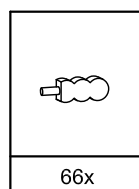



PARTS

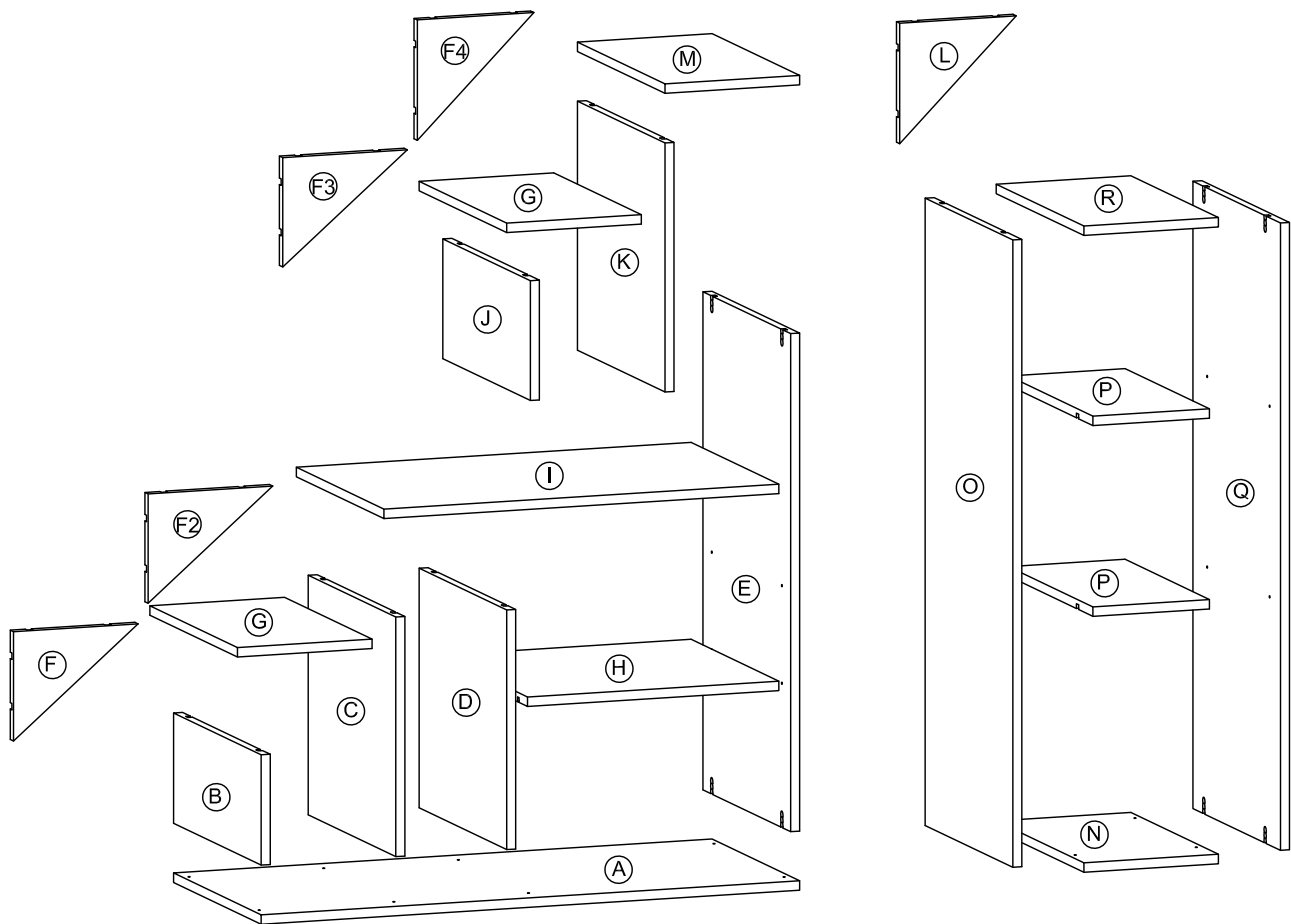

*** Use a drill with a M6 bit to fasten to cabinets. (M6 bit included)

*** Use a flathead screwdriver to fasten the bolts.

STEP 01

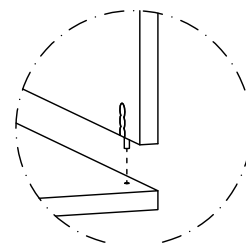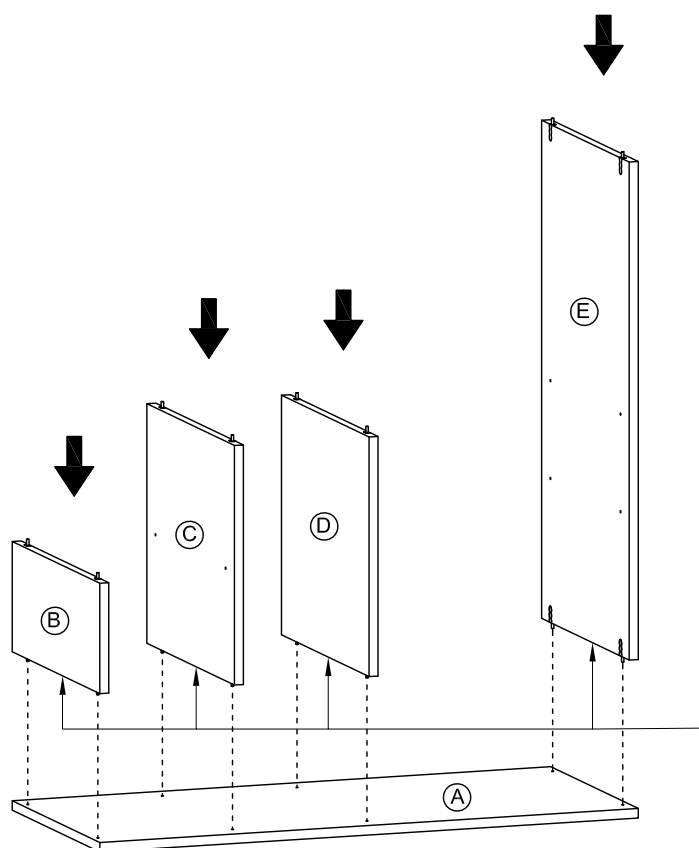


The cabienos must be align with a receiving hole




Apply wood glue to the edges of the wood that will make contact with each other.


STEP 02

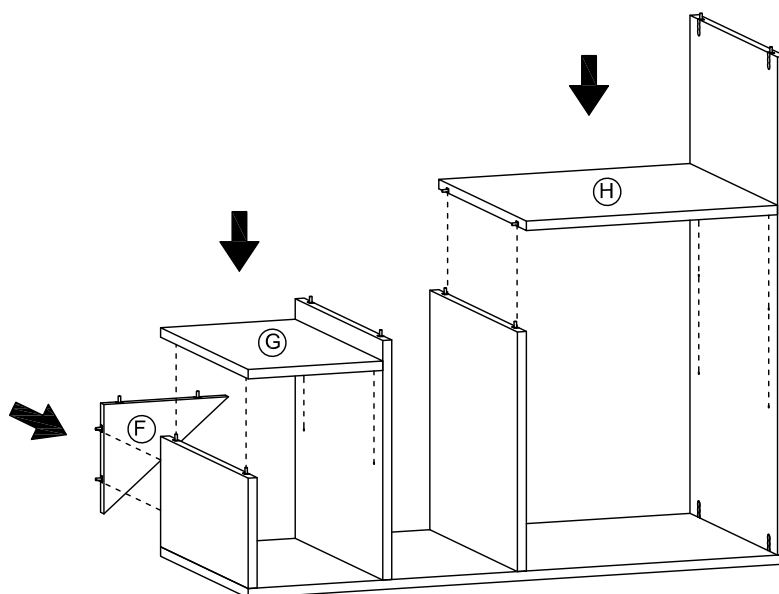


STEP 03

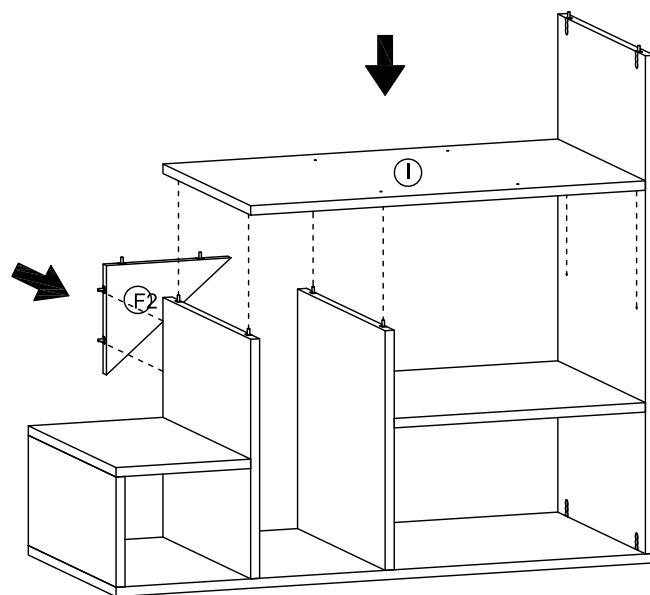


STEP 04

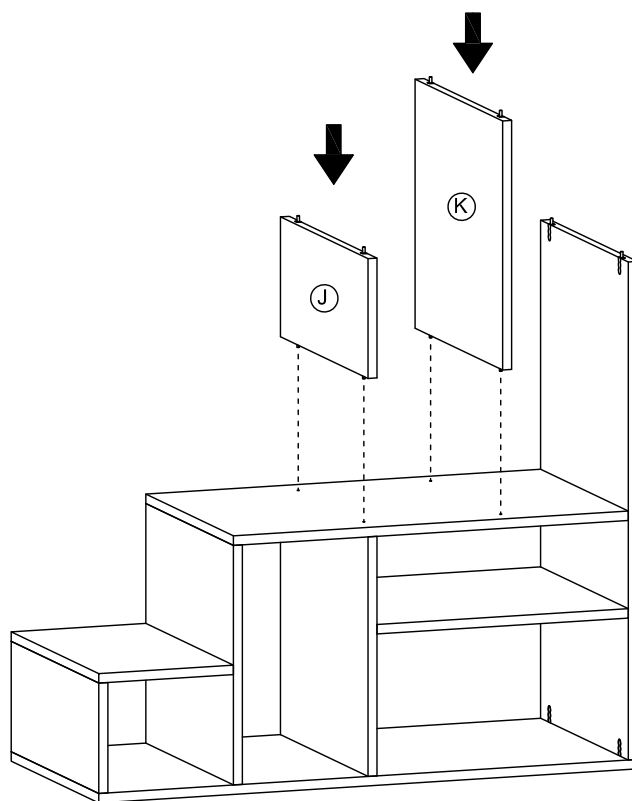


STEP
05

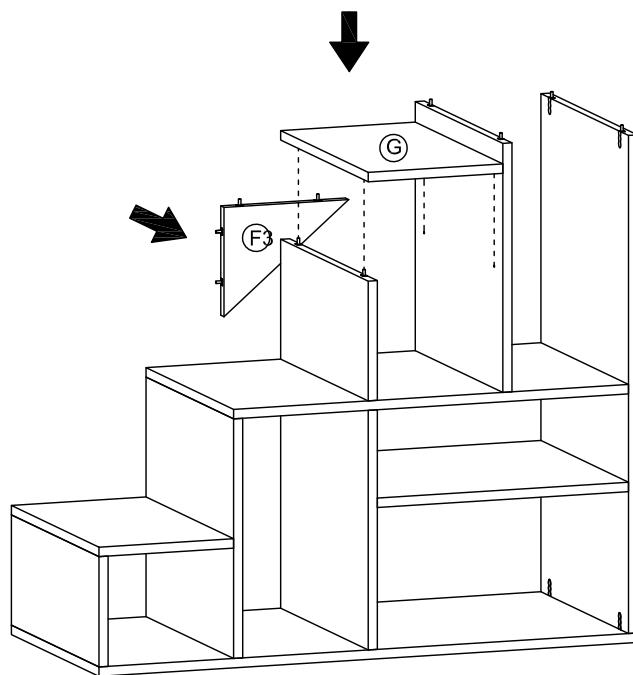


STEP
06

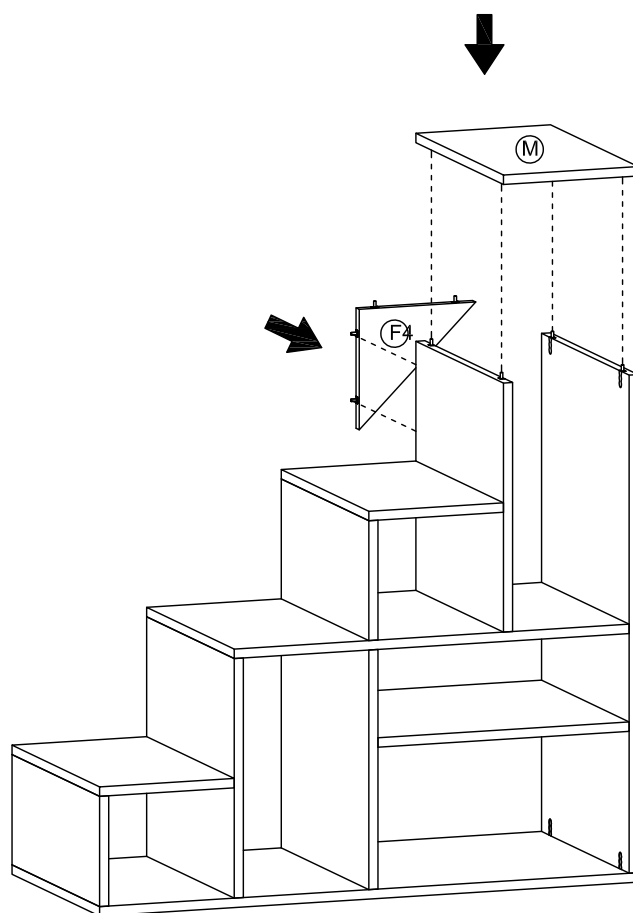


STEP 07

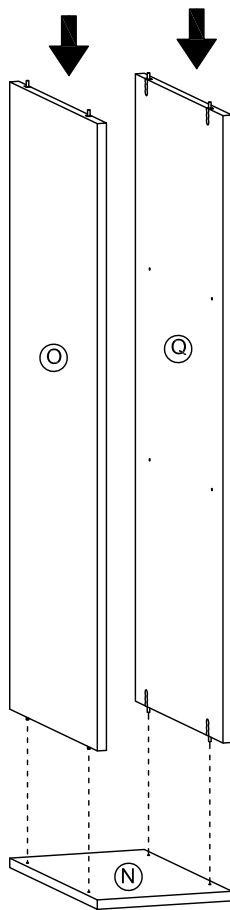


STEP 08

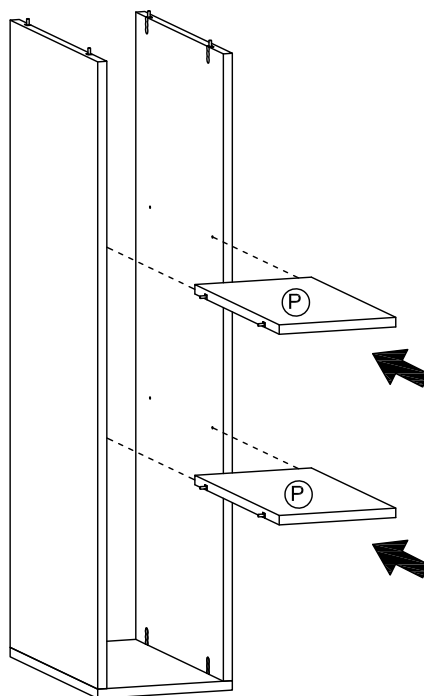


STEP
09

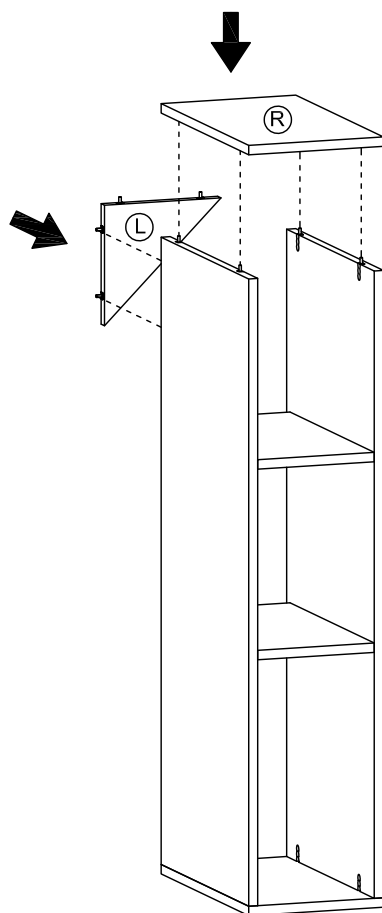

STEP
10

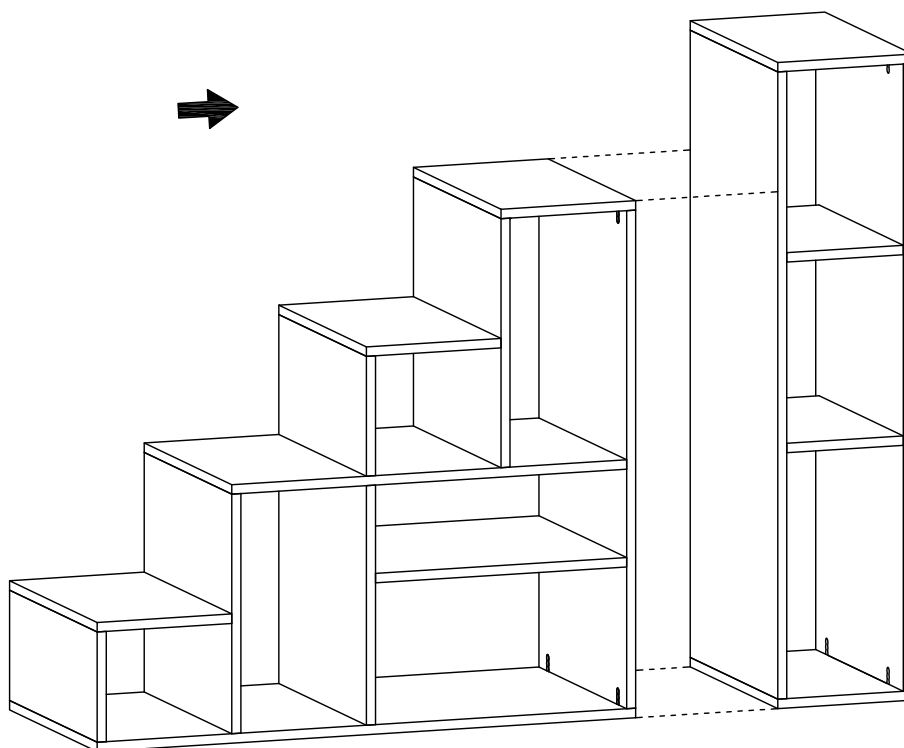

STEP 11

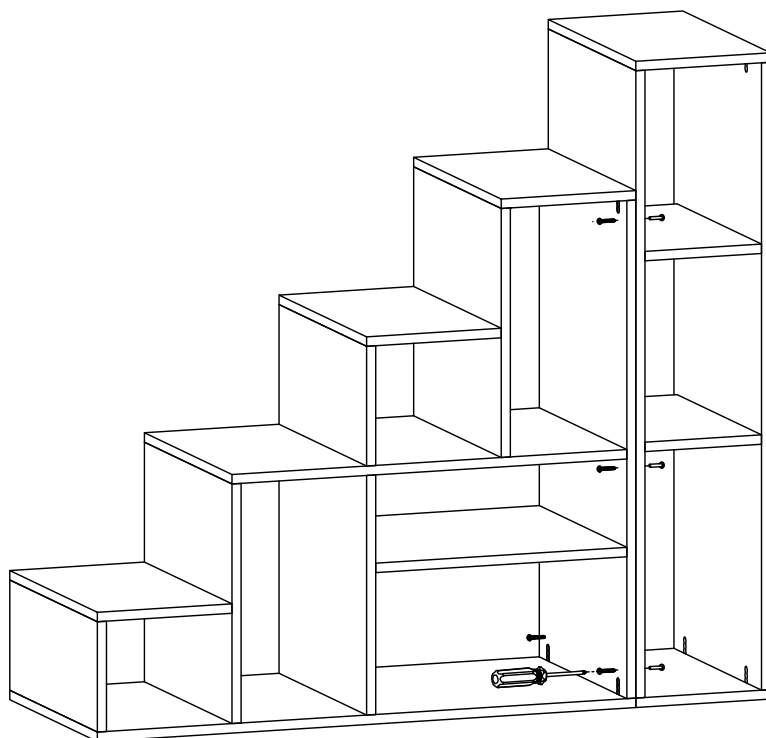

The final step would be to bolt the two components together.

*** Holes are predrilled for your convenience.

FINISH


Installation Note:

For the safest and most secure setup, we recommend professional installation.


Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.

Use the diagram for cabinet placement.

1. Match the number/letter indicated in the hinge pocket on back of cabinet to diagram.
2. Orient cabinet doors so hinge pockets match the red X's.
3. Screw Hinges into cabinets, then secure to staircase.

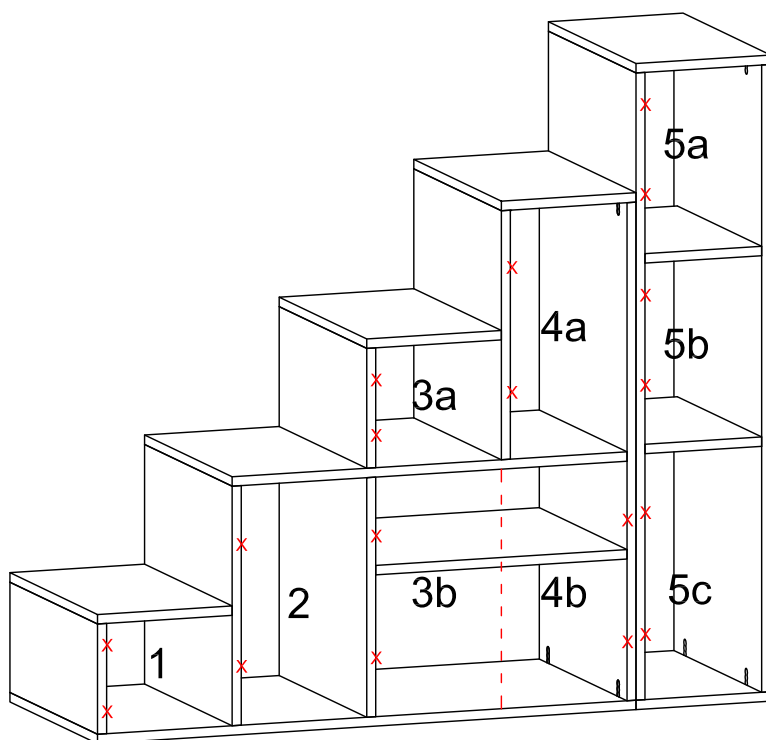

6th & 7th Stair Assembly



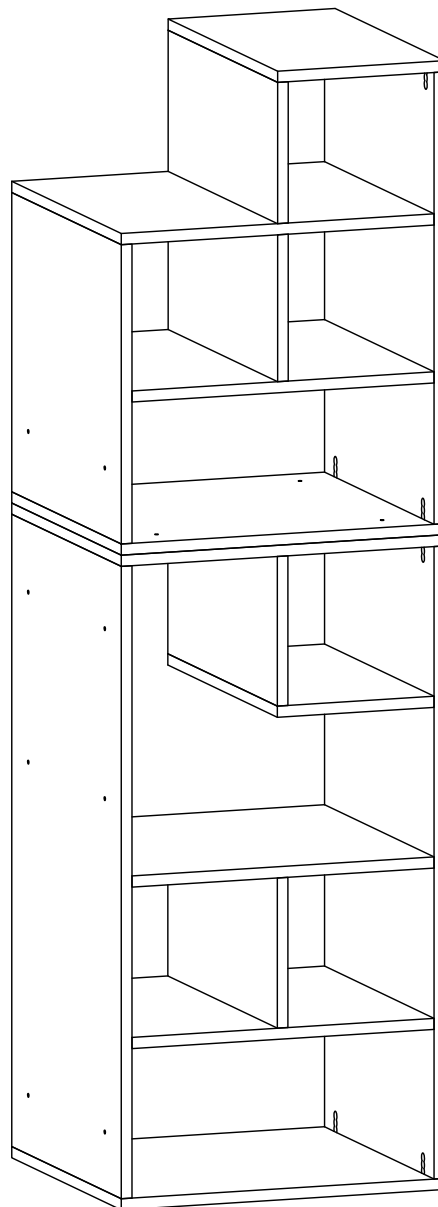


PARTS

Prior to assembly, orient the wood components using the diagram pictured below.

For example, for horizontal components, letters will be on TOP facing toward the front.


For vertical components, letters will be on the RIGHT side in vertical orientation.

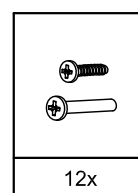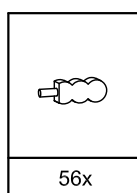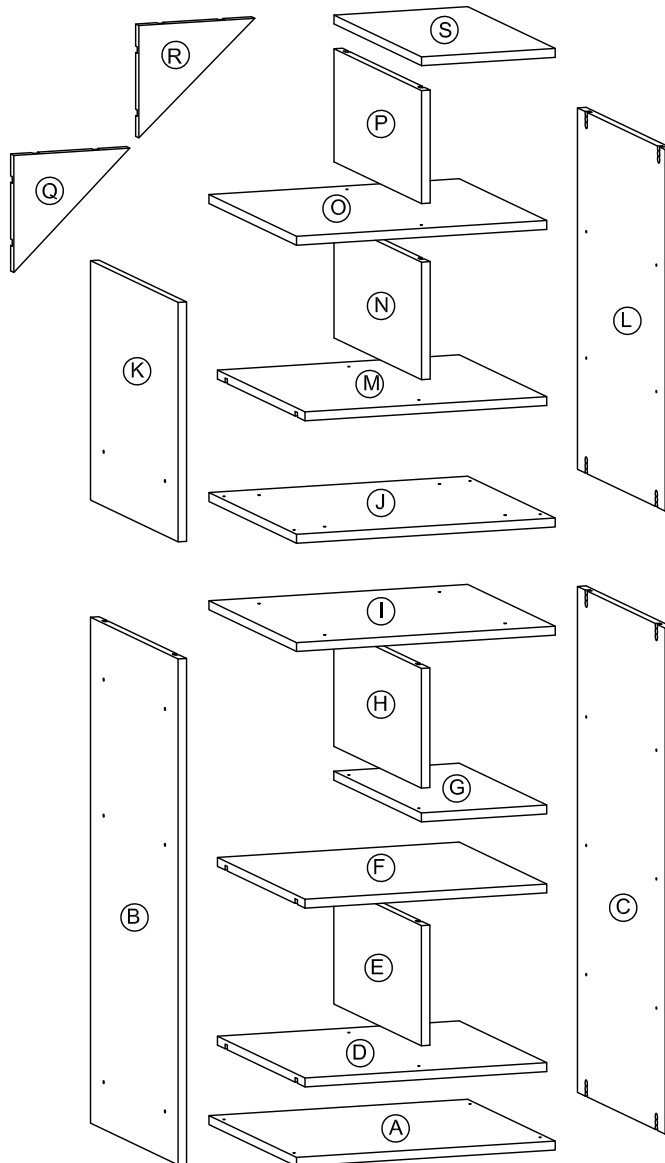

*** Use a drill with a M6 bit to fasten the cabienos. (M6 bit included.)


*** Use a flathead to screwdriver fasten the bolts.

STEP 01

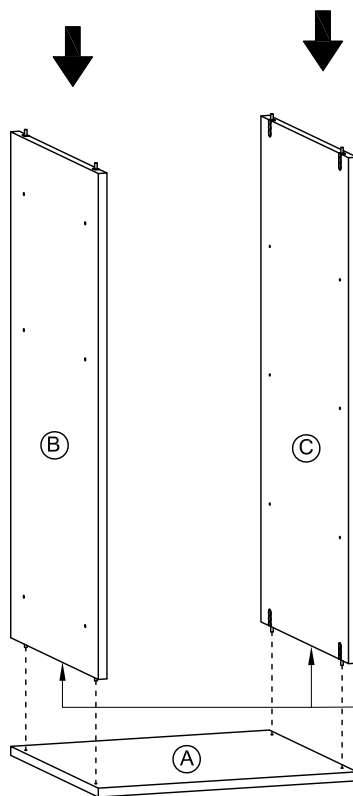

Recommended:

After connecting parts A and B, lay component C on back to complete rest of build.


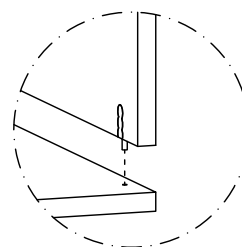


The cabienos must be align with a receiving hole




Apply wood glue to the edges of the wood that will make contact with each other.


STEP 02

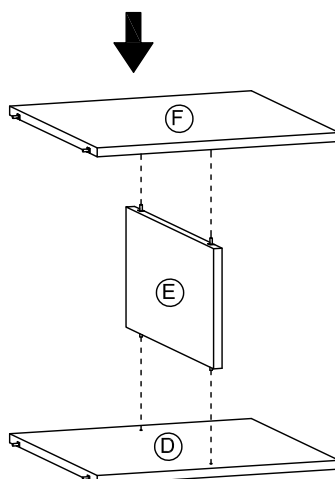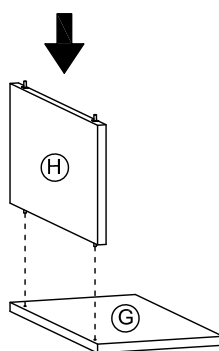


STEP 03

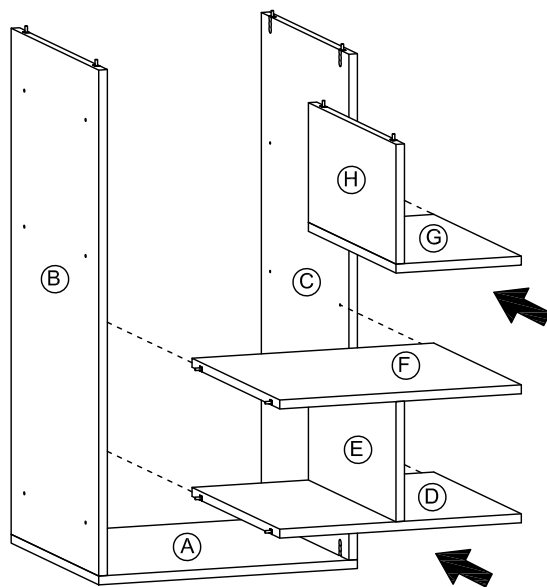


STEP 04

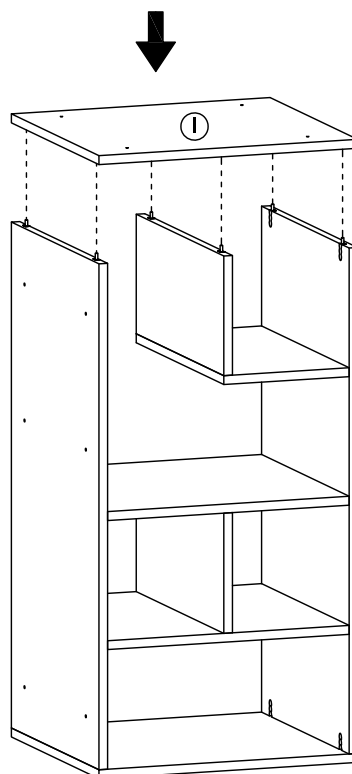


STEP 05

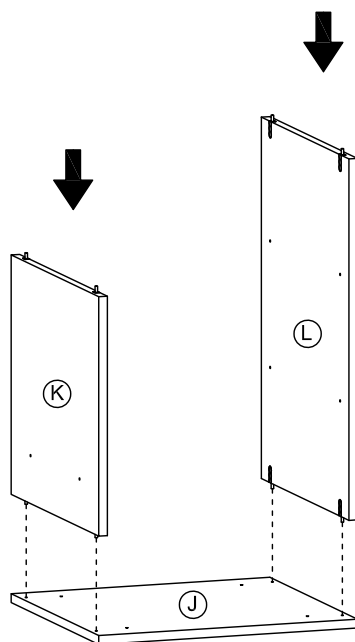


STEP 06

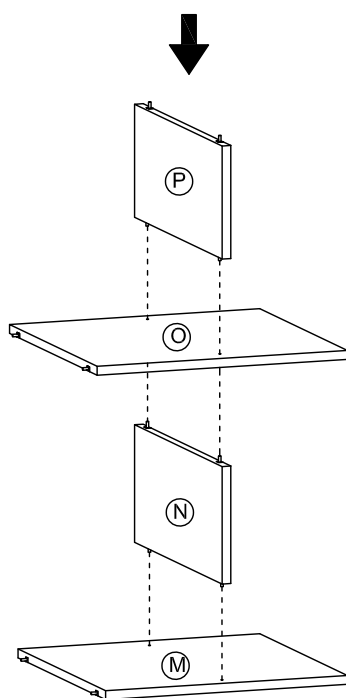


STEP 07

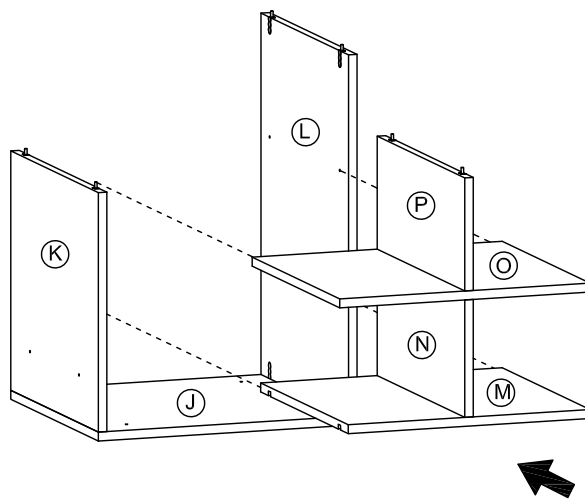


STEP 08

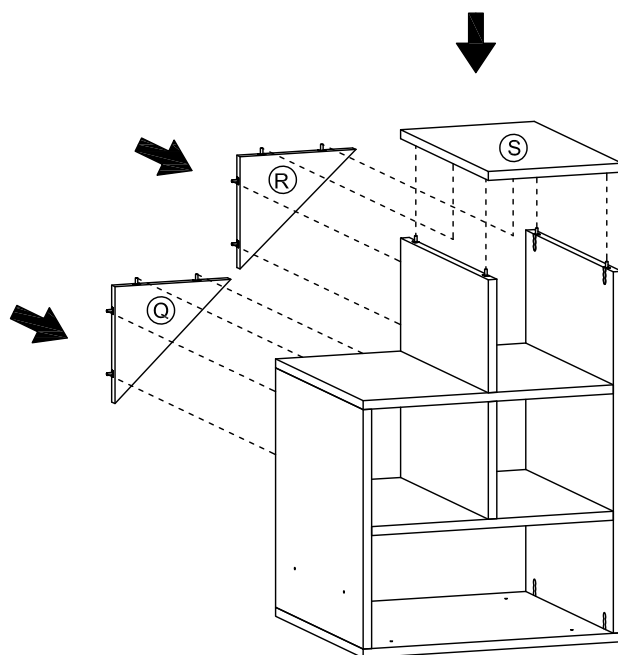

STEP 09

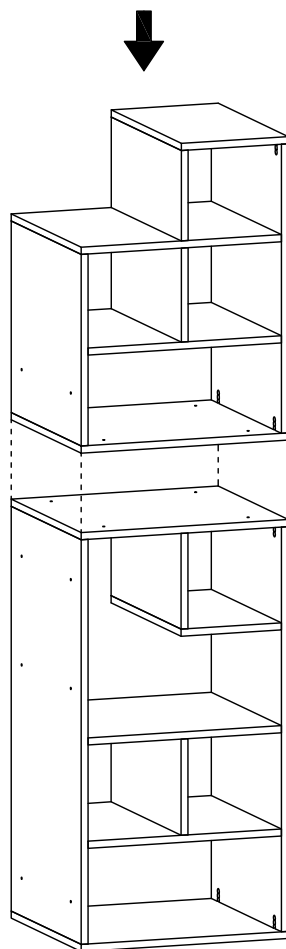


STEP 10

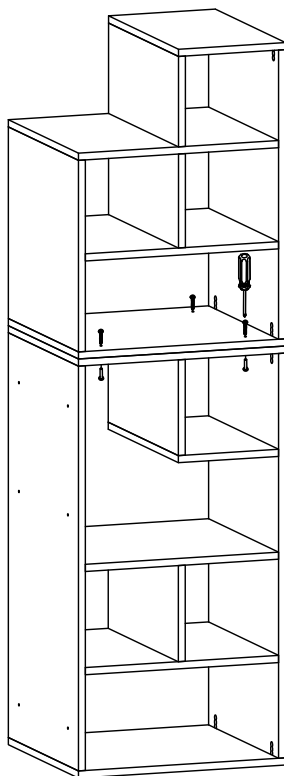

The final step would be to bolt the two components together.

STEP 11

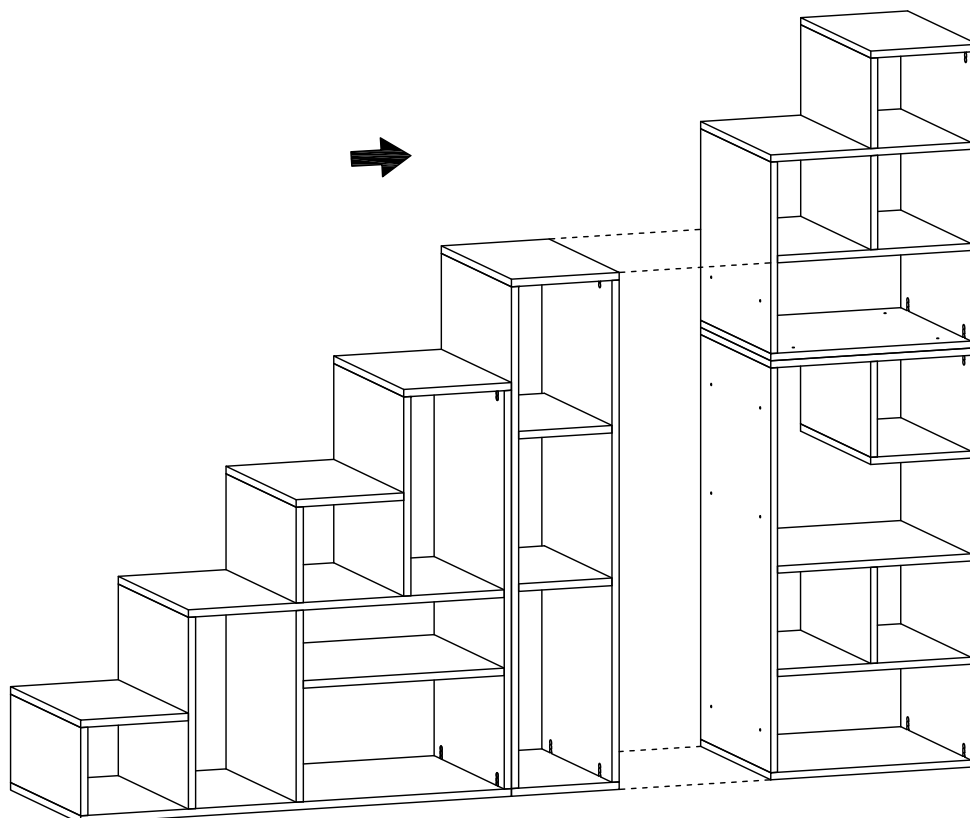


FINISH

Installation Note:

For the safest and most secure setup, we recommend professional installation.

Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.

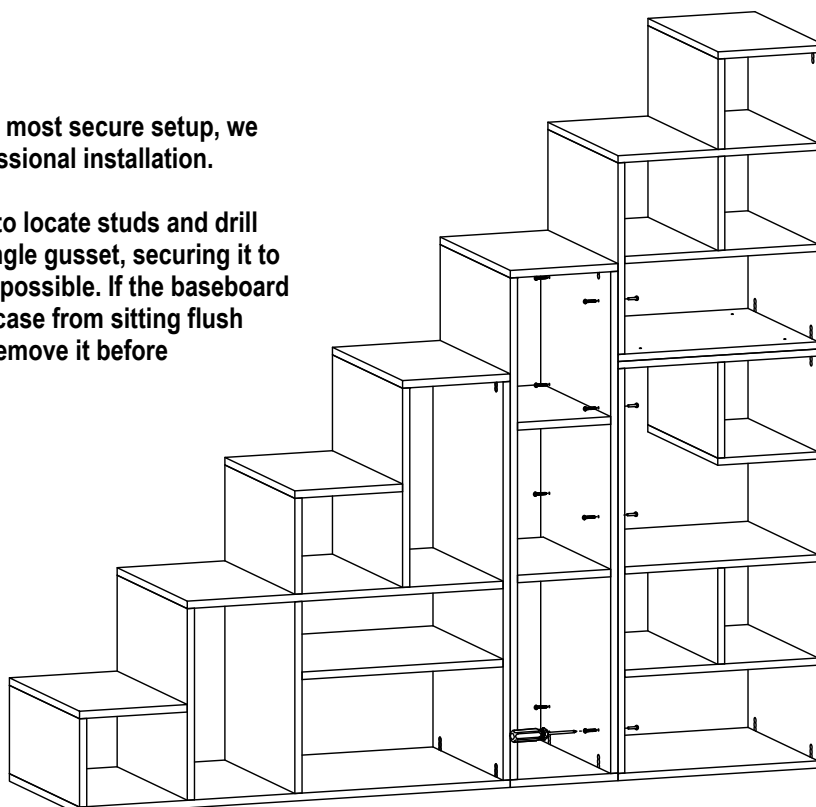

FINISH

Use the diagram for cabinet placement.

1. Match the number/letter indicated in the hinge pocket on back to diagram.
2. Orient cabinet doors so hinge pockets match the X's.
3. Screw hinges into cabinets, then secure to staircase.

