


5-Step Assembly Instructions

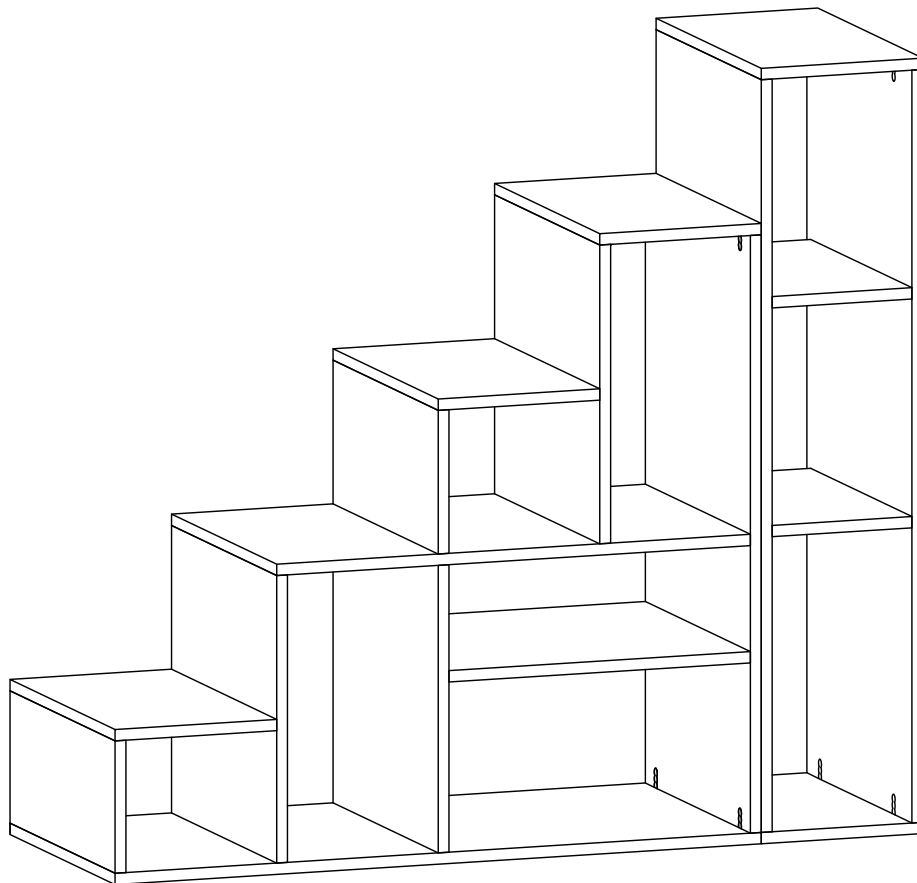


PARTS


Prior to assembly, orient the wood components using the diagram pictured below.

For example, for horizontal components, letters will be on TOP facing toward the front.



For vertical components, letters will be on the RIGHT side in vertical orientation.

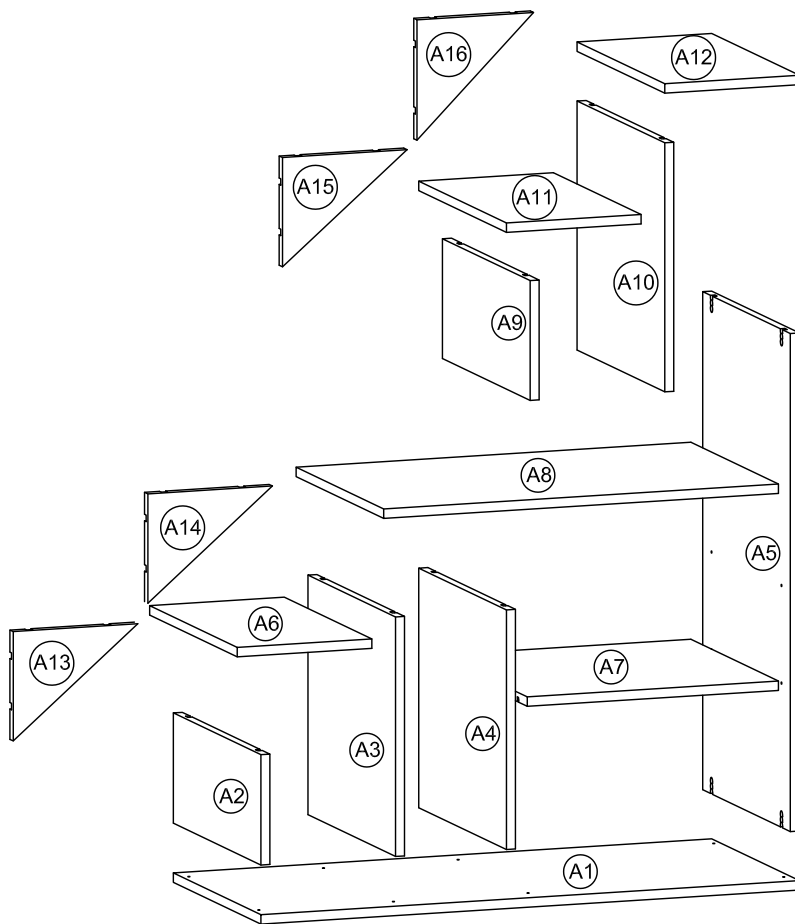



Component A

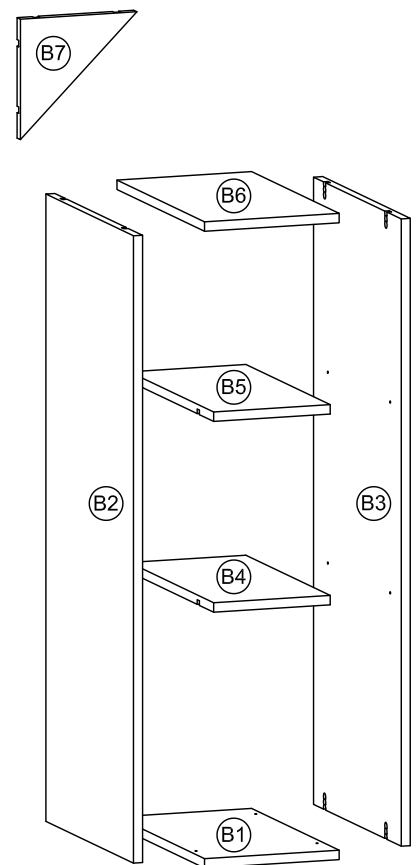

Component B

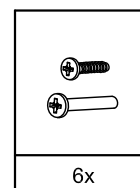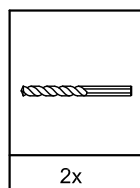

STEP 01

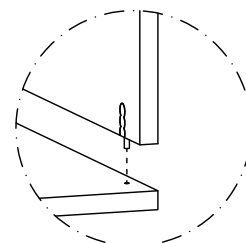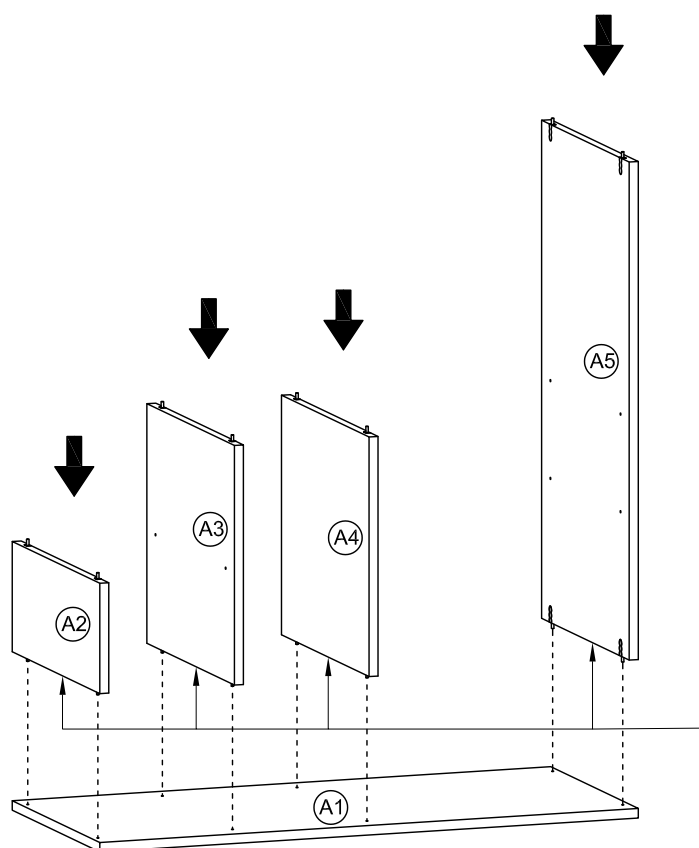


The cabinos must be align with a receiving hole




Apply wood glue to the edges of the wood that will make contact with each other.


STEP 02

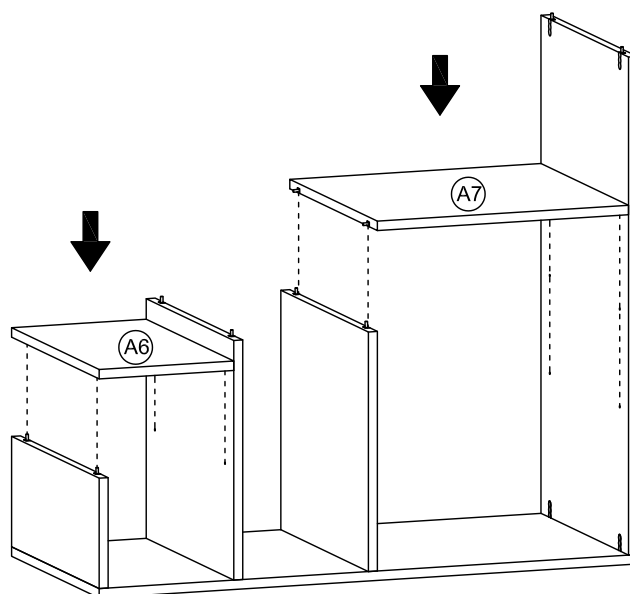


STEP 03

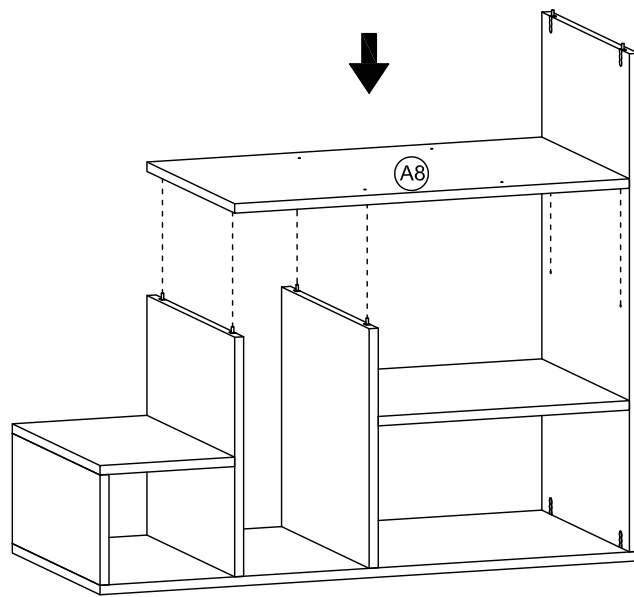


STEP 04

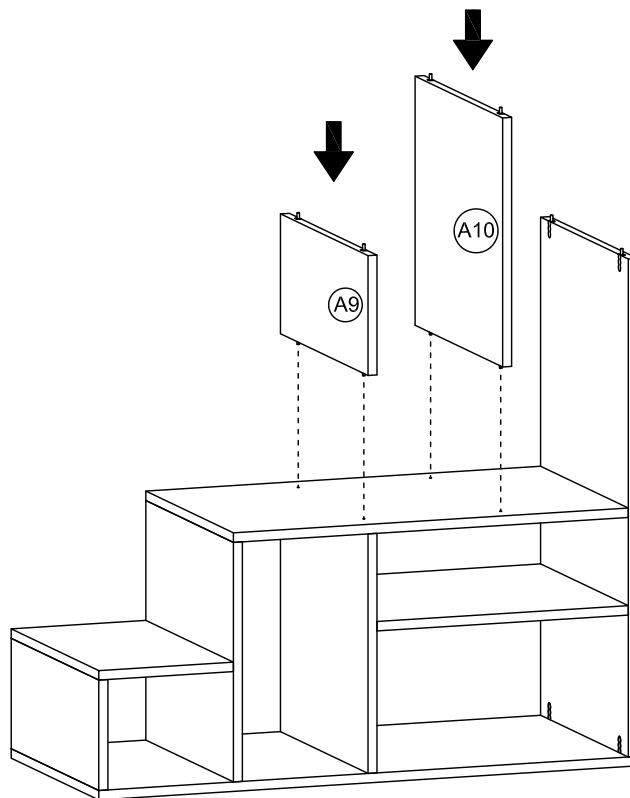


STEP
05

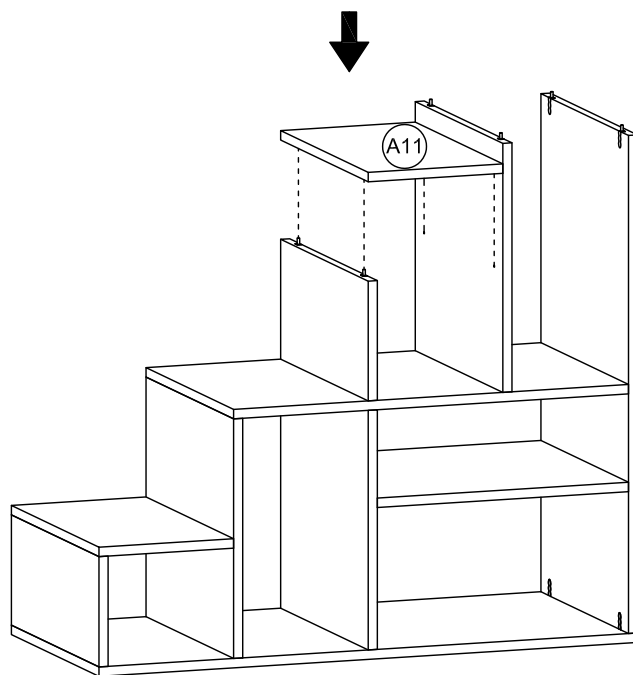


STEP
06

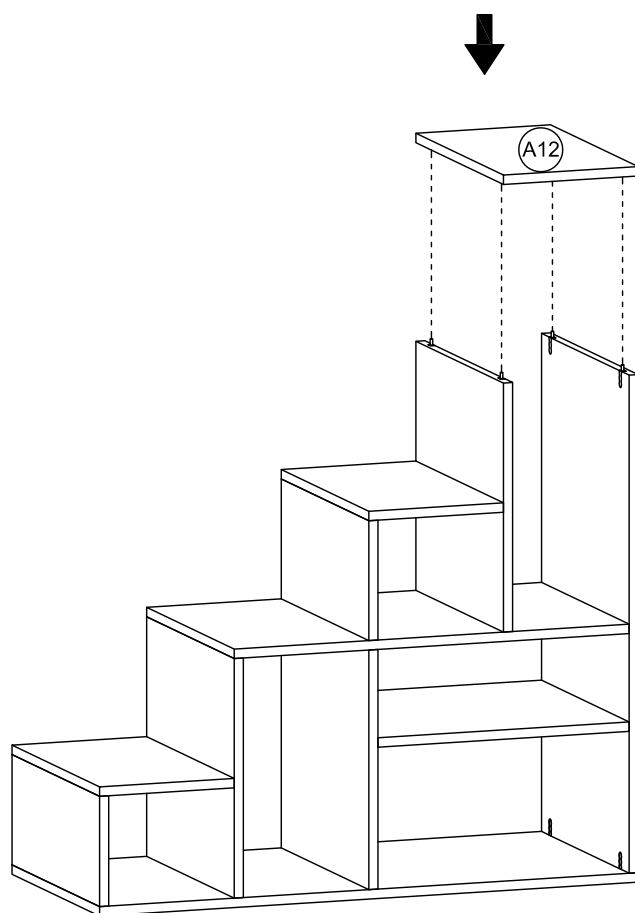


STEP 07

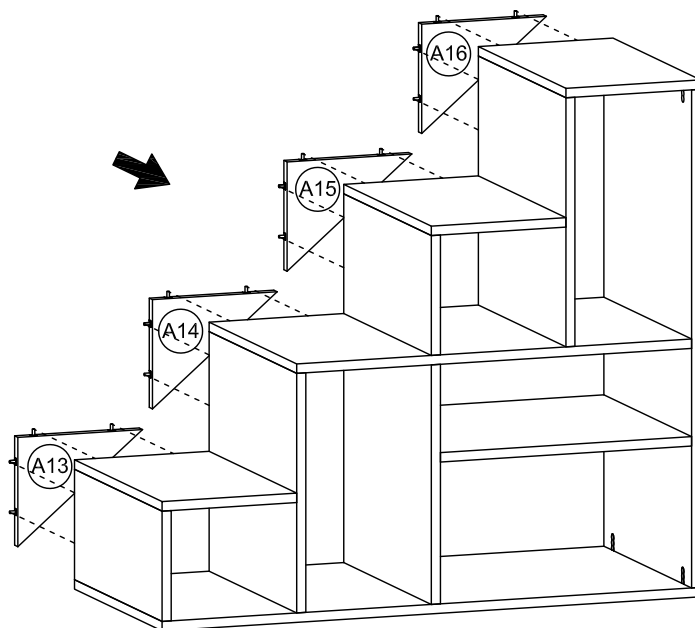


STEP 08

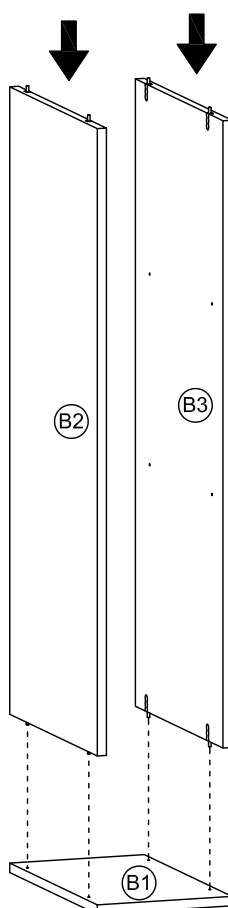


STEP 09

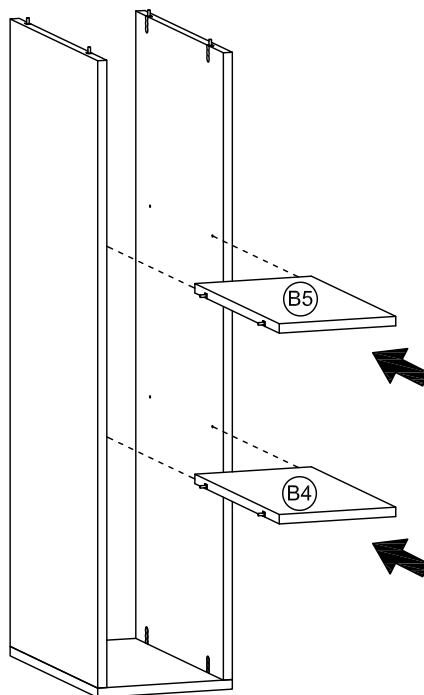


STEP 10

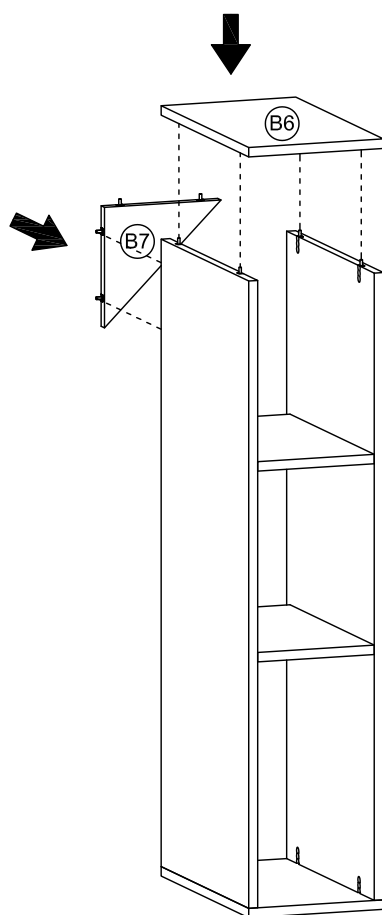

STEP 11

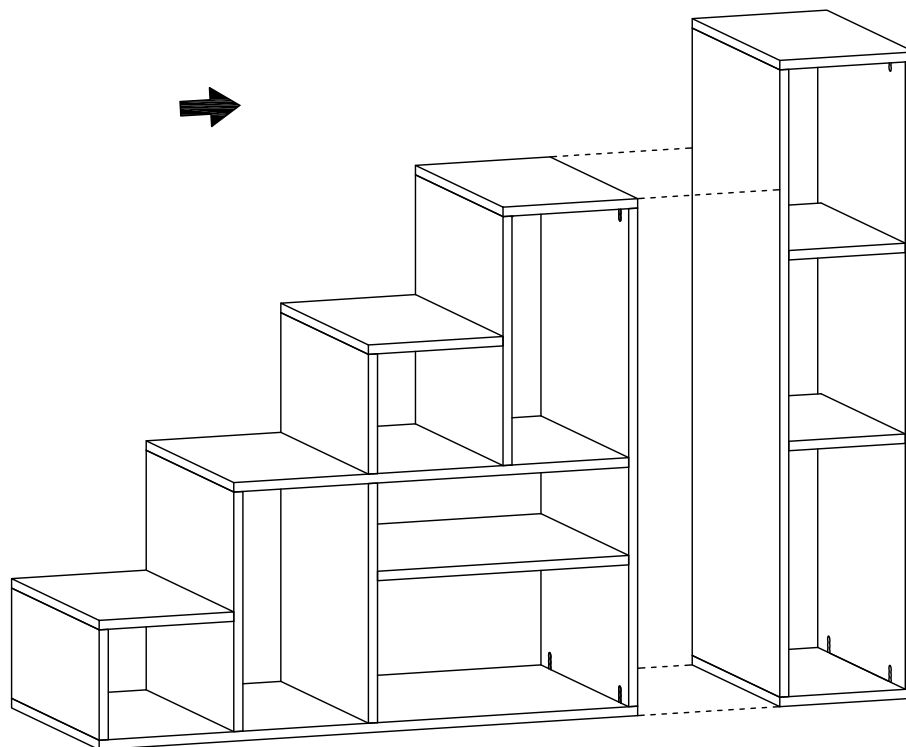

STEP 12

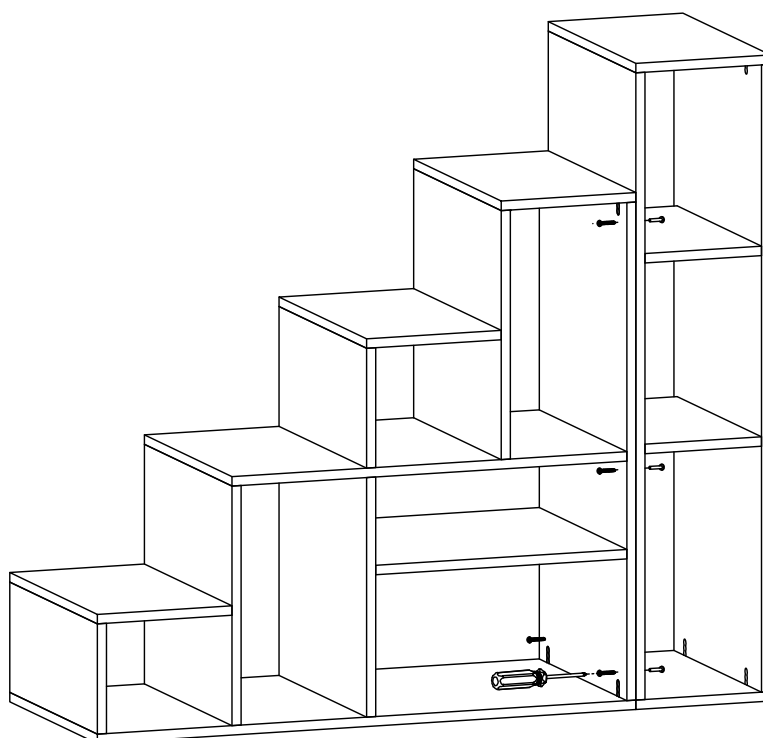

*** Holes are predrilled for your convenience.

FINISH

Use the diagram for cabinet door placement.

1. Match the number/letter indicated in the hinge pocket of the cabinet door to the diagram.
2. Screw hinges into cabinet door, then secure inside of staircase. Hinge placement indicated with 'X'.

Installation Note:

For the safest and most secure setup, we recommend professional installation.

Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.

