


6-Step Assembly Instructions



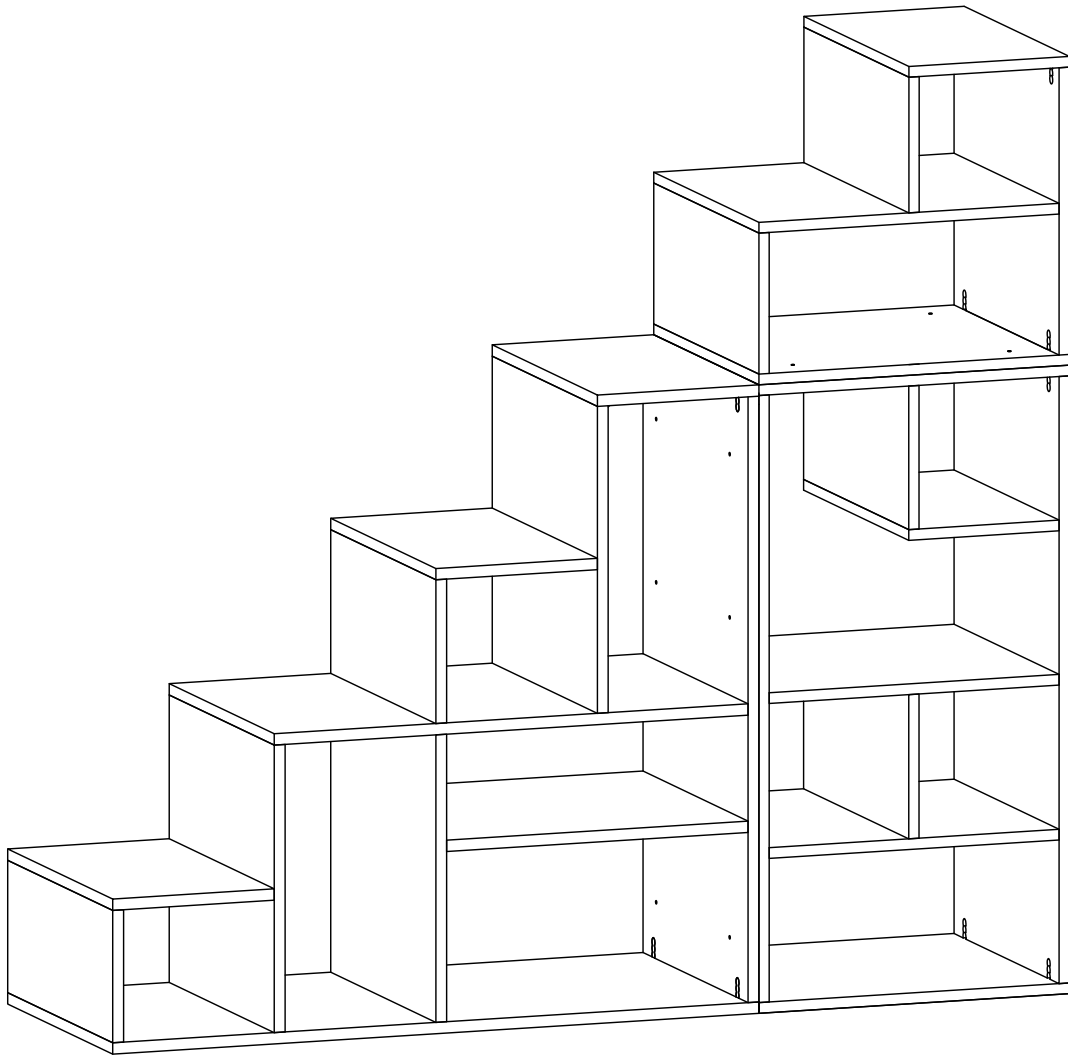


PARTS - Component A



Prior to assembly, orient the wood components using the diagram pictured below.

For example, for horizontal components, letters will be on TOP facing toward the front.

For vertical components, letters will be on the RIGHT side in vertical orientation.

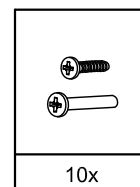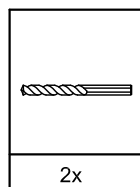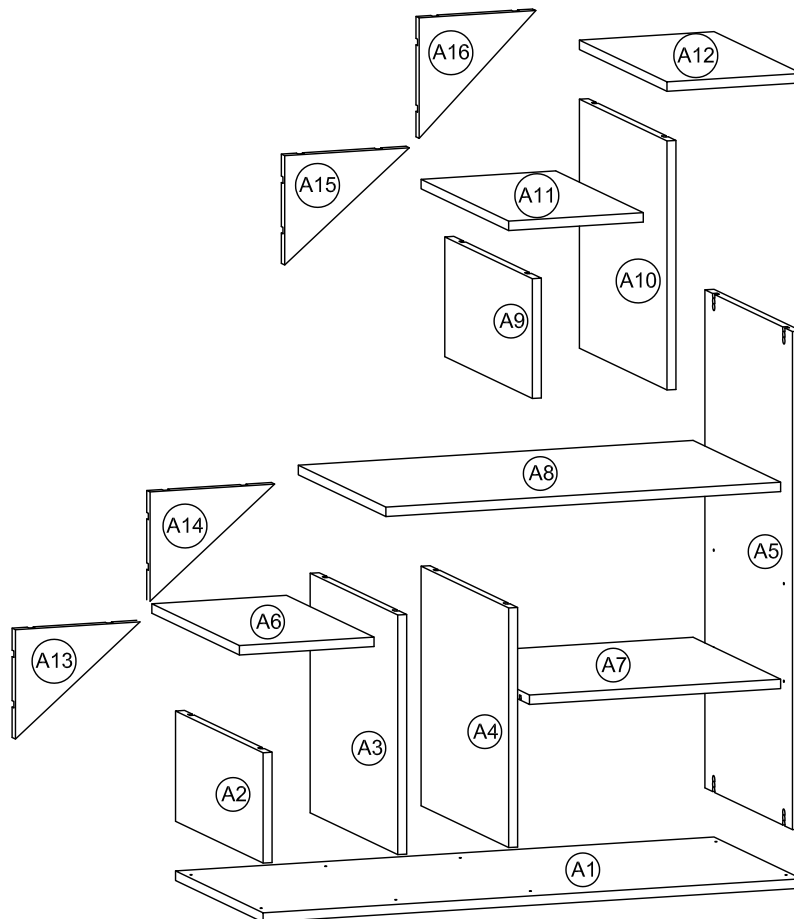

STEP 01

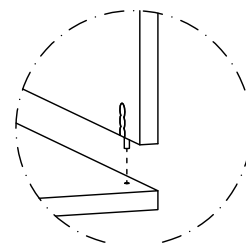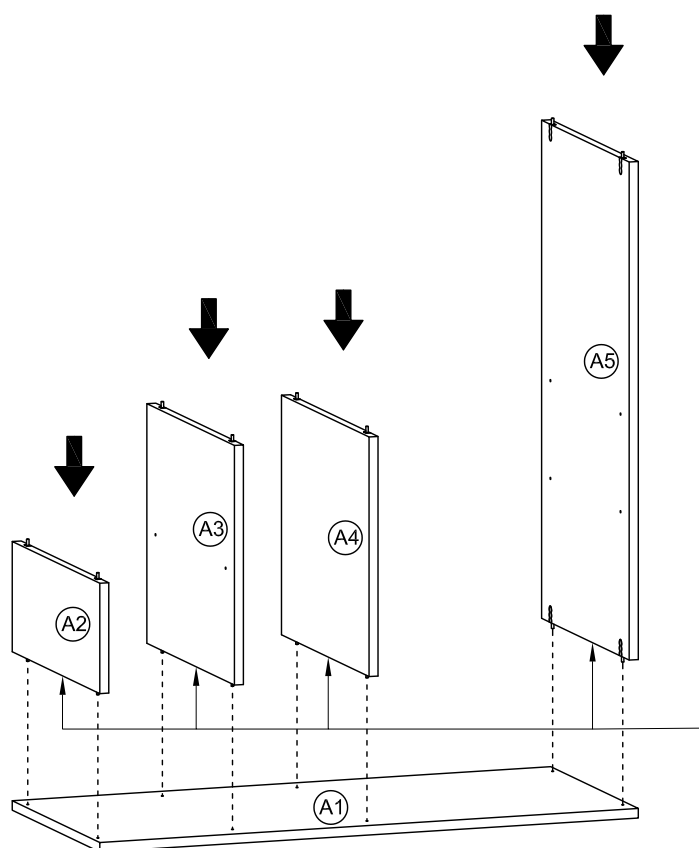


The cabienos must be align
with a receiving hole




Apply wood glue to the edges of the wood
that will make contact with each other.


STEP 02

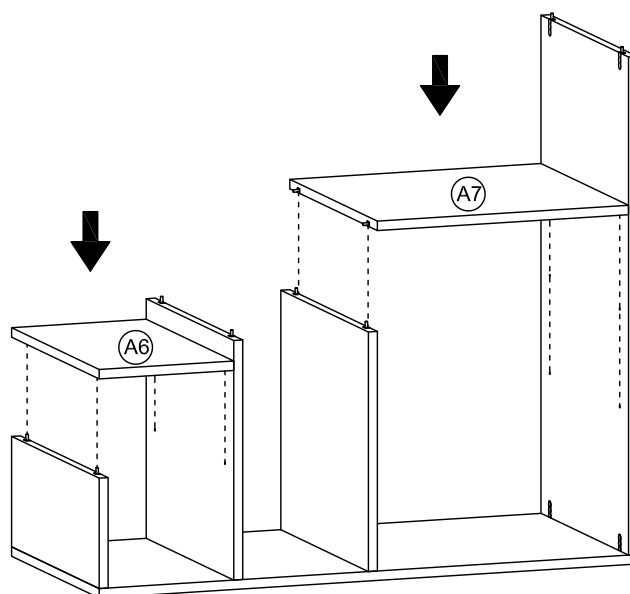


STEP 03

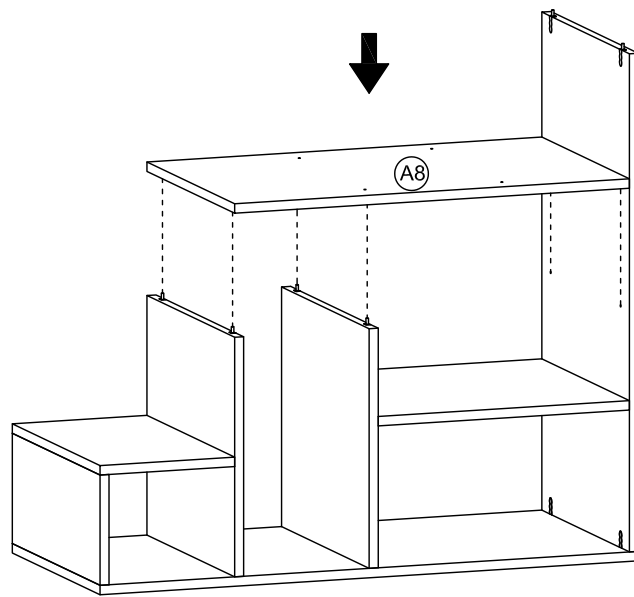


STEP 04

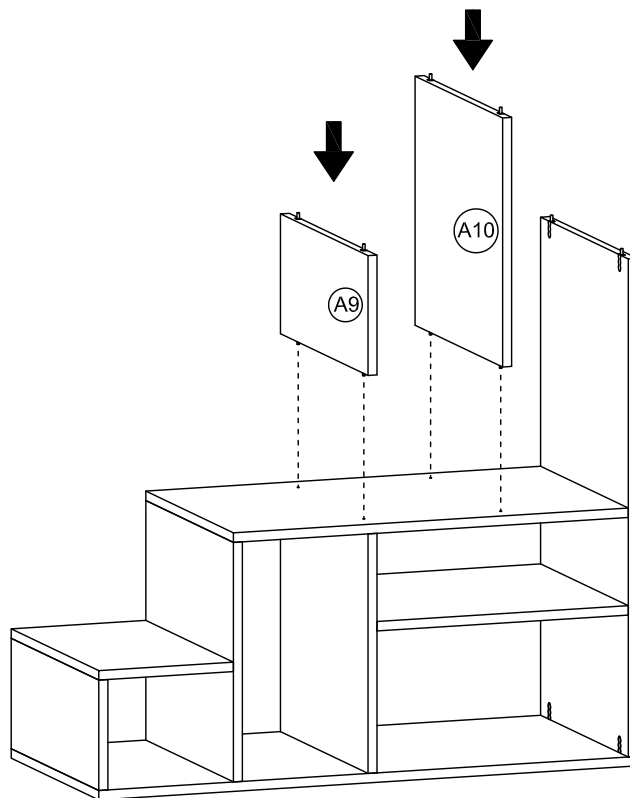


STEP
05

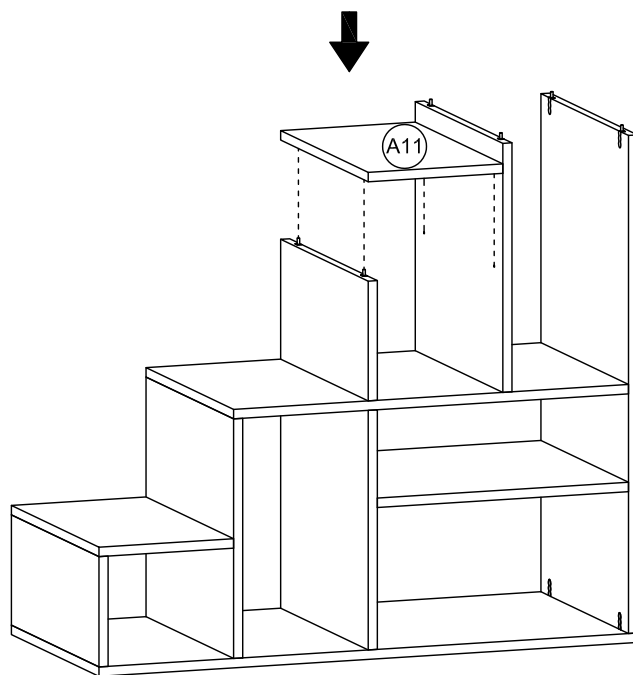

STEP
06

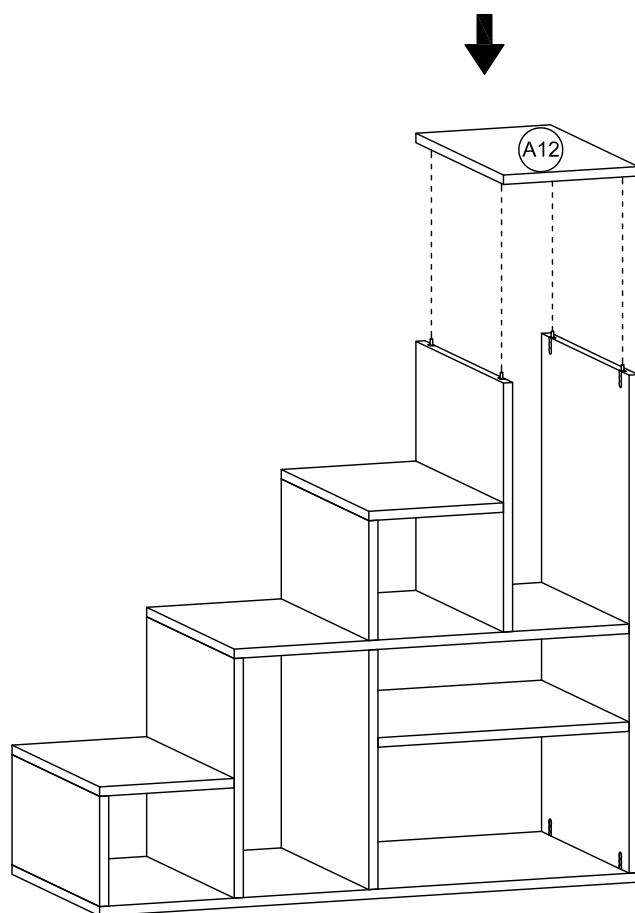

STEP 07

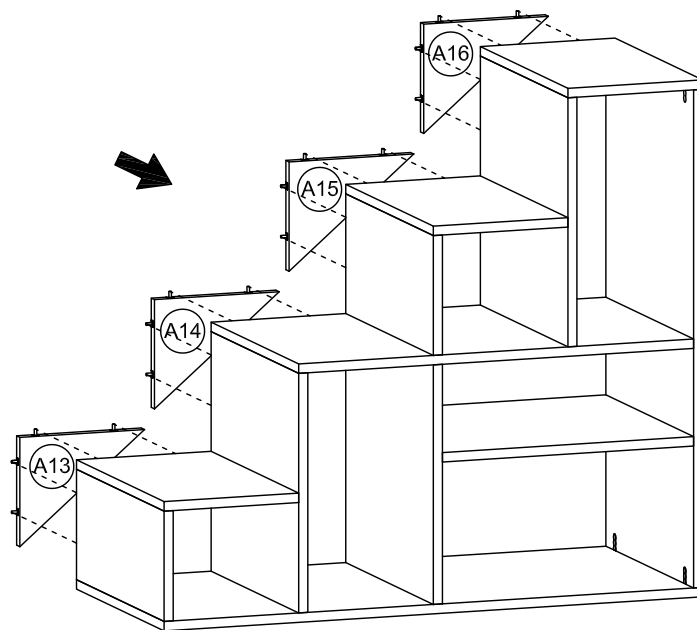


PARTS - Component C & D


Prior to assembly, orient the wood components using the diagram pictured below.

For example, for horizontal components, letters will be on TOP facing toward the front.

For vertical components, letters will be on the RIGHT side in vertical orientation.

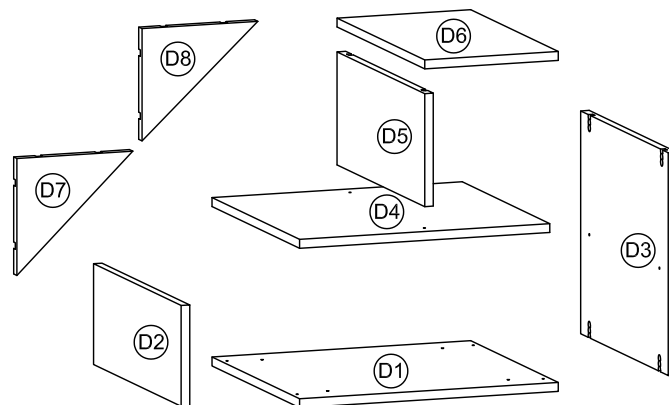


Component D

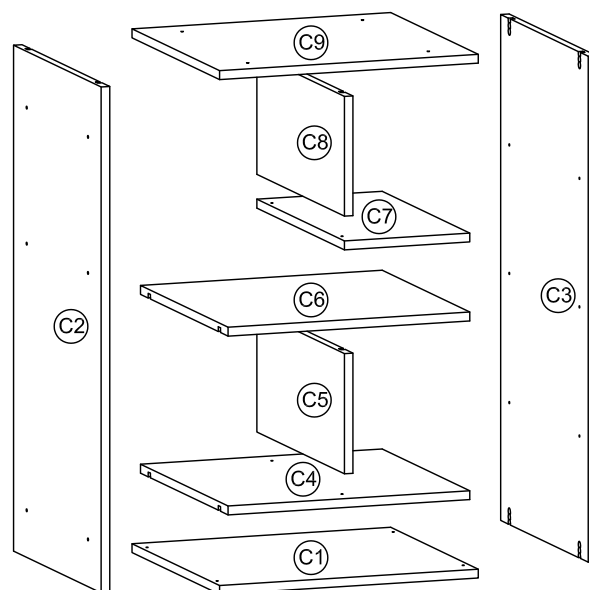


Component C


STEP 01

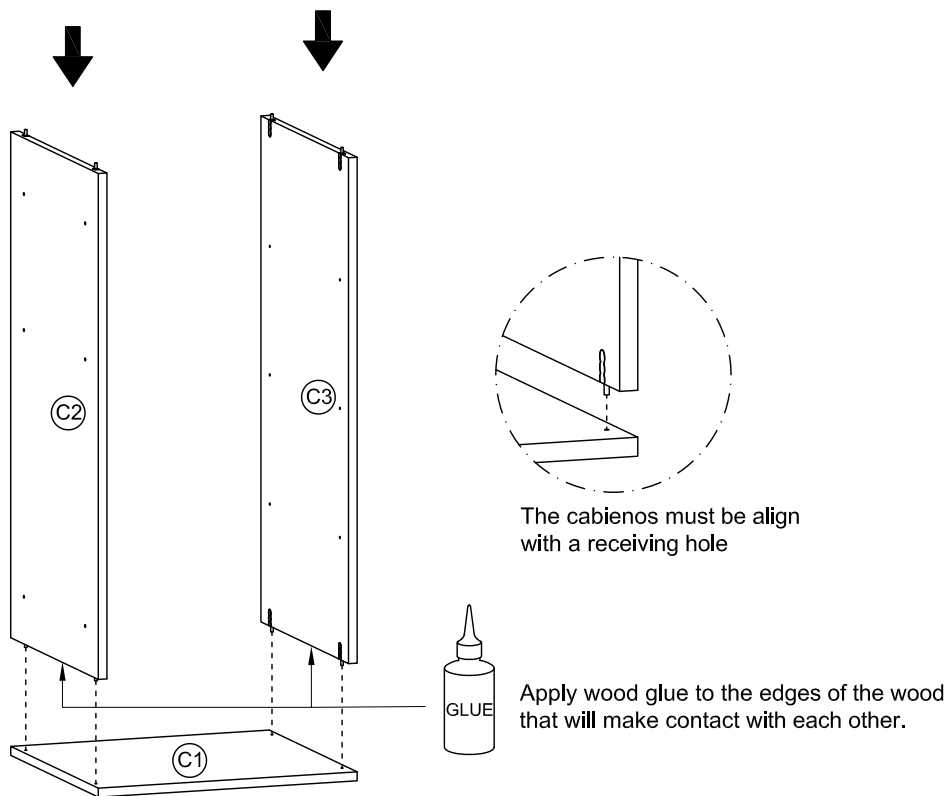


STEP 02

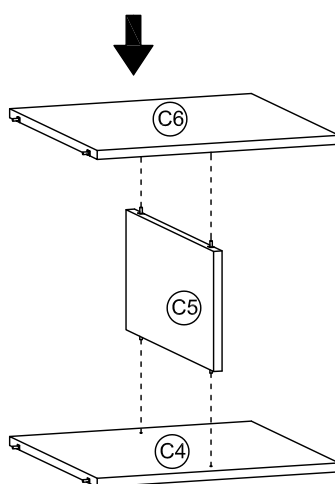


STEP 03

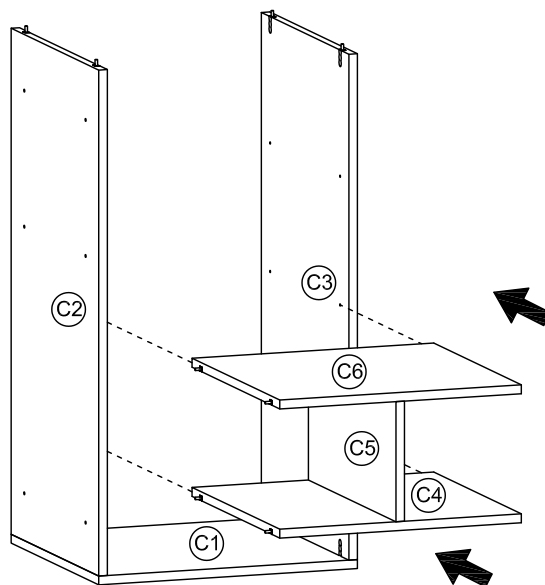


STEP 04

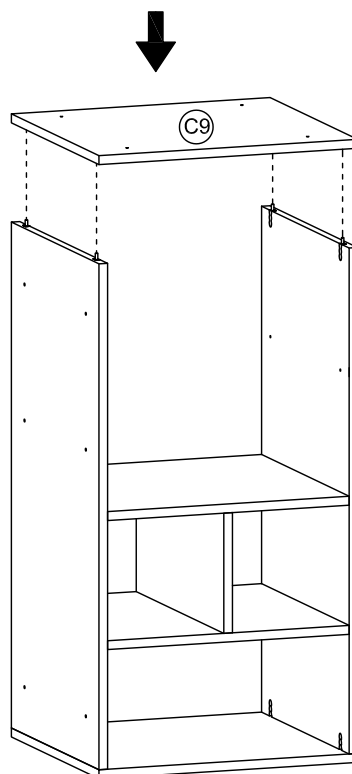


STEP 05

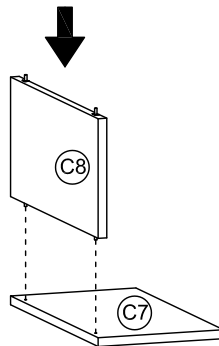


STEP 06

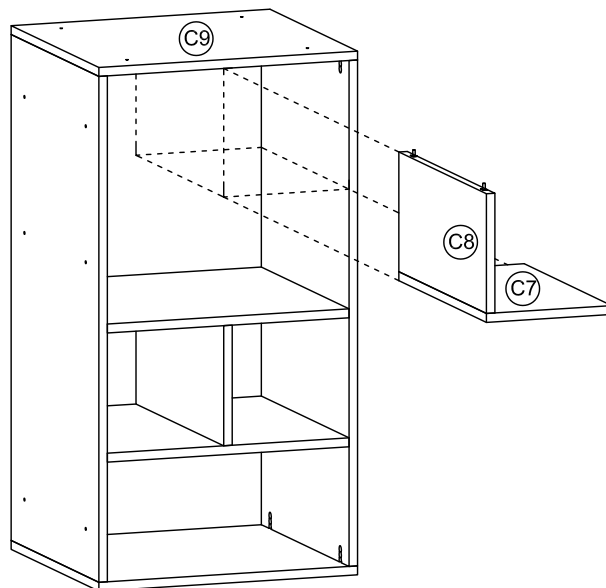


STEP 07

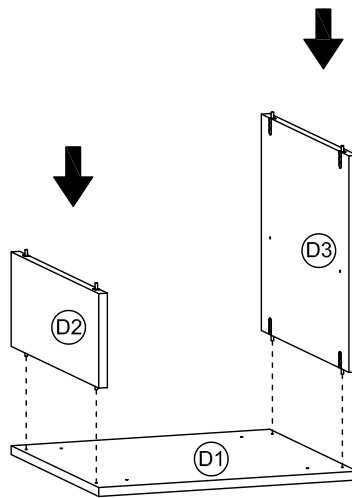


STEP 08

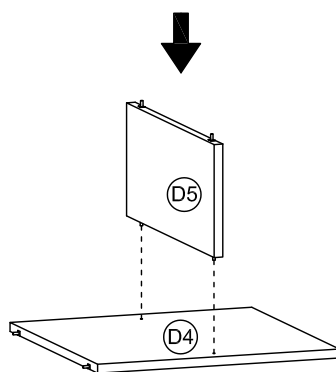


STEP 09

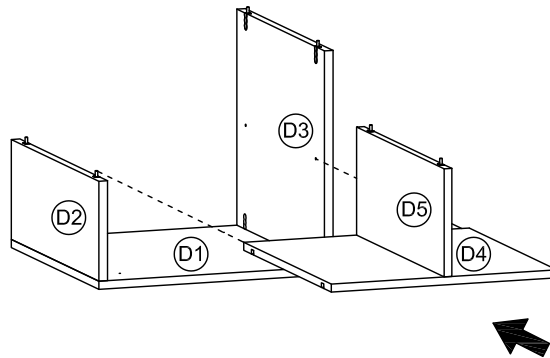


STEP 10

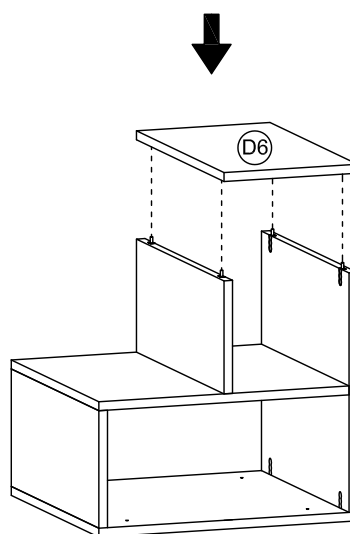

STEP 11

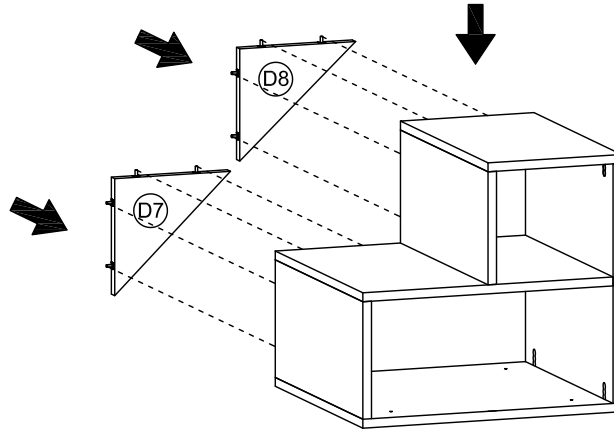


STEP 12

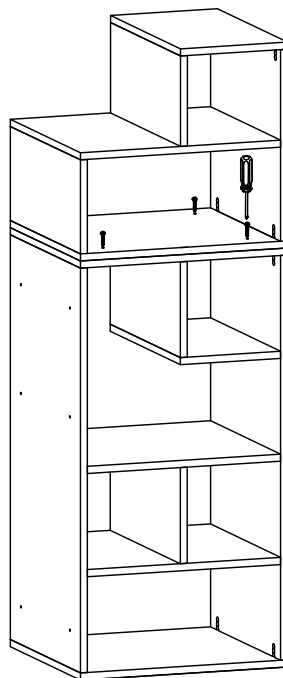

Bolt Components C & D together.

STEP 13

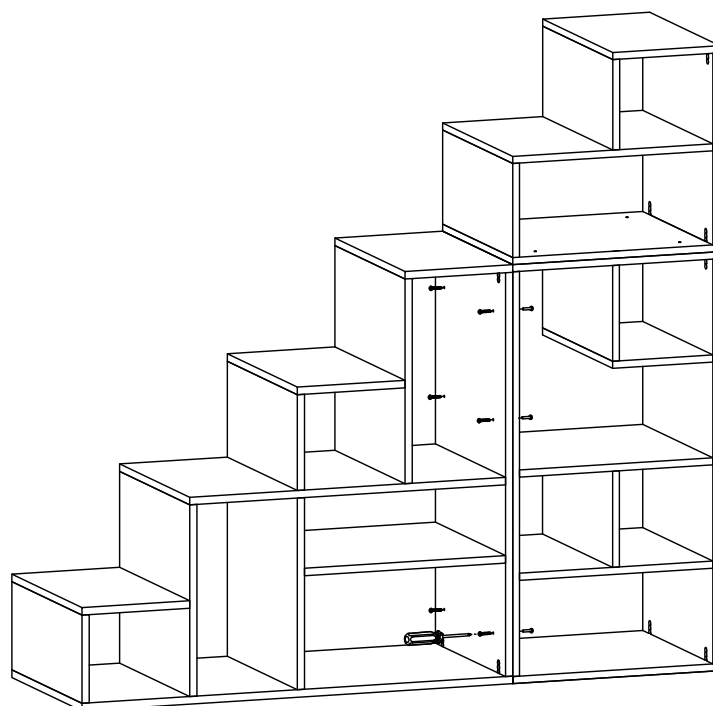

Bolt Components A & C together.

FINISH

Use the diagram for cabinet door placement.

1. Match the number/letter indicated in the hinge pocket of the cabinet door to the diagram.
2. Screw hinges into cabinet door, then secure inside of staircase. Hinge placement indicated with 'X'.

Installation Note:

For the safest and most secure setup, we recommend professional installation.

Use a stud finder to locate studs and drill through each triangle gusset, securing it to as many studs as possible. If the baseboard prevents the staircase from sitting flush against the wall, remove it before installation.

